



25 Nov 1995

On logic board behind the front panel

1. Remove D9 to expand vhf rx
2. Remove d10 to expand uhf rx
3. Cut w1 jumper wire to expand tx on all bands
4. AM selectable by holding [V/MHZ] button for 2 secs
5. Crossband repeat, set desired freqs press [VHF MAIN] [UHF MAIN]and [SET] simultaneously.To deactivate press [SET] for 2 secs

There is also a remote access feature but its lengthy and I hate typing. Larry G4OXY

D9/D8 ARE THE SMALL
BLACK DIODES

D9 →

D8 →

D6 →

D7 →

W1 →

D4T →

DS24, MPAGE, SSB, GPIC, etc.
を除去する。
DS4, DS4, DSSE, IC24等の部品は、
のこぎり刃で切り落とす。

ALL YOU HAVE TO DO
IS UNSOLDER AND LIFT
ONE END OF D9/D8
JUST TURN RADIO
ON NO RESIST
NEEDED.

Good Luck
3min JCB
CHECKRS from John

25 = OPTION UT-88

DS24
DATA +55V
CLK GND
GND BTU
DSDLV
TV TONE

Diode board found the front panel

Remove DPSS component(s)

Remove DS4 component(s)

Cut off jumper wires connecting on all boards

Cross and repair soldered loop press VHF MAIN
LHE MAIN and SELF mainboards

Push down press SEI for 2 sec