


Eliminating Squelch Crash in FR3000/FR4000

Note: Use this procedure only when using CTCSS tones.

1. Navigate to the **Common** window and click into any of the lines in the right-side window. The **Common 1** window will appear.
2. Change the **CTCSS Tone Burst** setting to **Phase** as shown in the following:

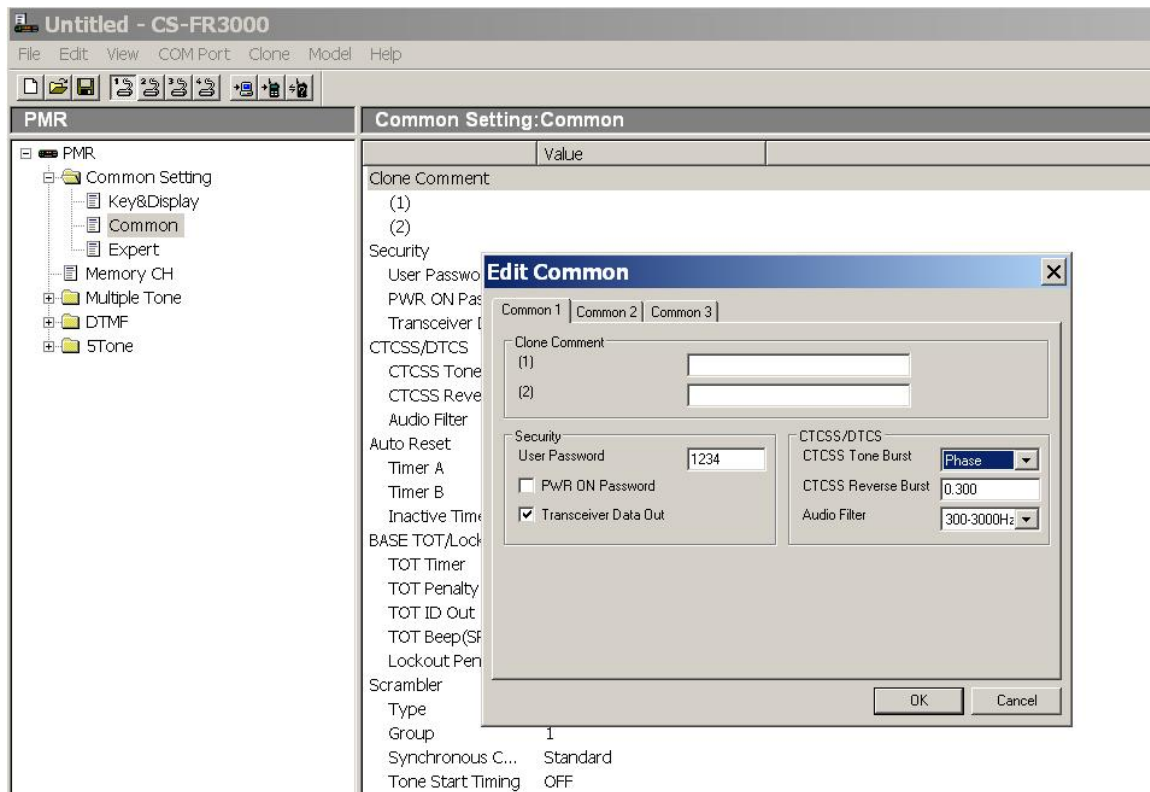

This setting is particularly important when using Motorola radios.

If there is still some squelch crash audible, increase the **CTCSS Reverse Burst** timer in increments of .1 until it disappears.