




SUPERSTAR[®]



HERCULE B-2950F

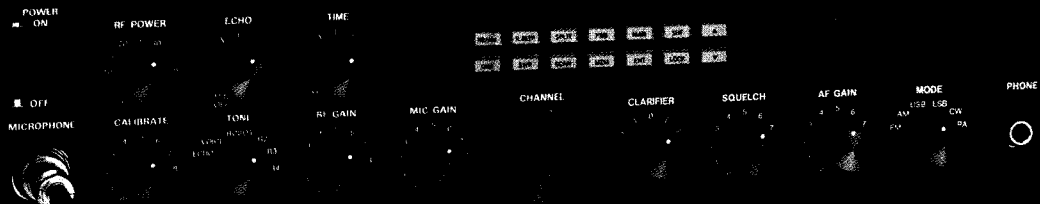

HERCULE

CRT HERCULE B2950 F

GÉNÉRALITÉS :

Fréquences couvertes	:	28 0000 à 29 6999 Mhz	EXPORT 26.32 MHZ
Fonction Split	:	Semi duplex activé	
Pas d'incrémentation	:	100 Hz, 1 KHz, 10 KHz, 100 KHz, 1 Mhz	
Classes d'émission	:	USB, LSB (J3E) CW (A1A) AM (A3E) FM (F3E)	
Fréquence control	:	PLL synthétisé	
Fréquence tolérance	:	0,005 %	
Fréquence stabilité	:	0,001 %	
Température de fonctionnement	:	0°C à 40°C	
Antenne impédance	:	50 Ohms	
Haut parleur impédance	:	8 Ohms, 2 Watts	
Micro impédance	:	400 Ohms, pastille dynamique	
Affichage	:	Digital LCD	
Alimentation	:	220 V AC	

ÉMETTEUR :

Puissance de sortie antenne	:	AM/FM : 12 W - USB/LSB/CW : 25 W
Fréquences parasites	:	- 50 Db
Suppression de la porteuse	:	- 50 Db
Connecteur antenne	:	UHF 50 (SO239)
Modes de transmission	:	USB, LSB, CW, AM, FM

RÉCEPTEUR :

Réception pour 10 Db de signal/bruit AM	:	0,5 Microvolts USB/LSB/CW : 0,3 Microvolts FM : 1 Microvolt
Rejection image	:	65 Db
AGC Figure	:	SSB/CW/AM : 80 Db pour 50 Microvolts pour 10 Db change en BF sortie
Puissance BF à 10 % de distorsion	:	2,5 Watts
Principe de réception	:	Double changement de fréquence (10 695 Mhz et 455 KHz)

AGRÉMENT PTT : 910021 AMA 1

 & **SUPERSTAR**®

481, 524, rue de la Pièce Cornue - Zone Industrielle
21160 Marsannay-la-Côte - FRANCE
Tél : (33) 03 80 51 90 11
Fax : (33) 03 80 51 90 28 - Telex : 351 447
S.A. au capital de 5 000 000 FF

DISTRIBUTEUR AGRÉÉ :

SECTION SUBJECT :

SPECTIFICATION	2
1. OPERATION	
1.0 Introduction	3
1.1 Control & Connections	3
1.2 Rear Panel Connectors	5
1.3 Microphone	5
1.4 Operation	5
2. PROGRAMMING	
2.0 Introduction	7
2.1 Frequency Selection	7
2.2 Frequency Scanning	8
2.3 Offset Frequency Operation	9
3. ALIGNMENT	
4.0 Test Equipment	10
4.1 PLL Synthesizer & Oscillator Frequency Alignment	10
4.2 Receiver Alignment	11
4.3 Transmitter Alignment	12
4. BLOCK DIAGRAM	13
5. SCHEMATICS & PCB LAUOUT	14

CRT HERCULE B2950F

SPECIFICATIONS

GENERAL


Model	CRT HERCULE B2950F
Frequency	28.000 -- 29.699MHz
Emission Steps	AM , FM, CW, USB, LSB
Frequency Control	Phase - Locked - Loop Synthesizer
Frequency Tolerance	0.005%
Frequency Stability	0.005%
Temperature Ranger	- 30°C to + 55°C
Antenna Impedance	50 Ohms
Meter Function	RF Output, RX Receive Signal Strength Modulation, SWR Calibration, SWR
Input Voltage	AC 110V,60Hz (AC 220V,50Hz)

TRANSMITTER

RF Power Output	25W : USB, LSB 12W : CW 8W : AM/FM
RF Transmit Modes	AM , FM, CW, USB, LSB
Antenna Connector	UHF Type, 50 Ohms
Modulation	16F3
Spurious Emissions	-60dB
Carrier Suppression	-60dB

RECEIVER

Sensitivity for 10dB S/N	AM 1.0uV
Sensitivity for 10dB S/N	USB/LSB/CW 0.2uV
Sensitivity for 20dB S/N	FM 1.0uV
Image Rejection Ratio	-65dB
AGC Figure of Merit	SSB/CW/AM : 80dB for 50mV for 10dB Change in Audio Output
Audio Output Power @ 10% THD	2.5W

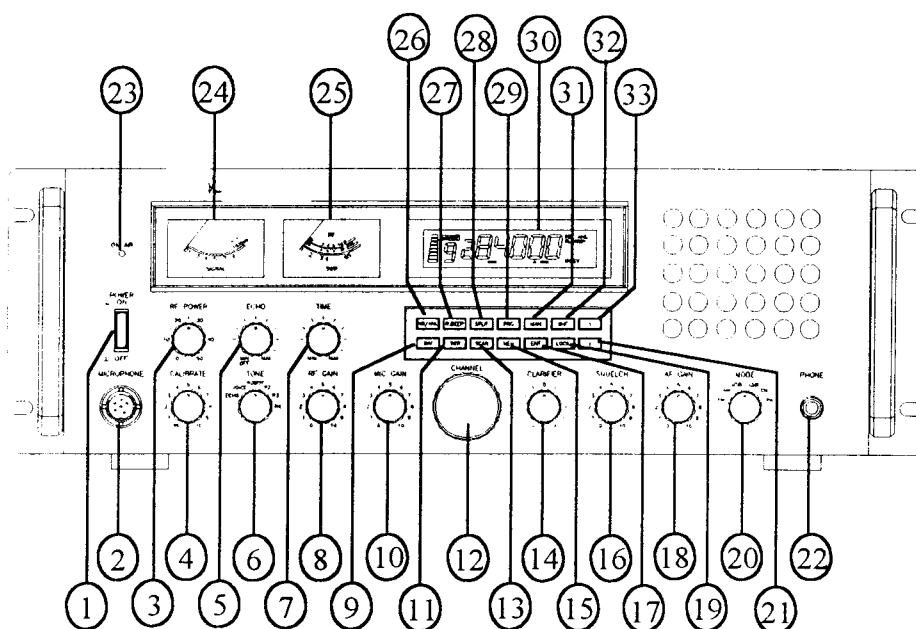

1.0 INTRODUCTION


This section explains the basic operating procedures for the **HERCULE B2950F** Citizen's Band 11 meter mobile transceiver.

sound and voice change to change your tone.

1.1 CONTROL & CONNECTIONS

1. **POWER ON/OFF CONTROL** : Push on to apply power to the unit.
2. **MICROPHONE JACK** : Used to connect microphone for voice source.
3. **RF POWER CONTROL** : This control that to adjust the RF power output level you want in AM or FM transmission.
4. **CALIBRATE CONTROL** : This control allows the user to calibrate the SWR meter.
5. **ECHO** : This control is used to ECHO effect.
6. **ECHO/VOICE/ROBOT SWITCH** : This SW is used to select special sound effect, you can transmit your message in a echo, robot
7. **TIME** : Set this control to your desired echo delay.
8. **RF GAIN CONTROL** : This control is used to reduce the gain of the RF amplifier under strong signal conditions.
9. **DIM SWITCH** : This switch adjust the display backlighting in four different steps to best match environment.
10. **MIC GAIN CONTROL** : This control adjusts the microphone gain in the transmit mode. This feature is designed for use in a high-ambient noise environment or to maximize talk power.
11. **SWR SWITCH** : This switch is used to check SWR.
12. **CHANNEL SELECTOR** : This control is used to select a desired channel or frequency.

13. **SCAN SWITCH** : This switch is used to scan frequencies in each band segment. The operation section of this manual provides detailed information on using this scan control.
14. **CLARIFIER CONTROL** : Allows variation of the receiver operating frequency above and below the assigned frequency. Although this control is intended primarily to tune in SSB signal, it may be used to optimize AM/FM signals as described in the operating procedure paragraphs.
15. **MEMORY SWITCH** : This is used program memory channels.
16. **SQUELCH CONTROL** : This control is used to control or eliminate receiver background noise in the absence of incoming signal. For maximum receiver sensitivity, it is desired that the control be adjusted only to the point where the receiver background noise is eliminated. Turn fully counterclockwise, then slowly clockwise until the receiver noise disappears. Any signal to be received must now be slightly stronger than the average received noise. Further clockwise rotation will increase the threshold level which a signal must overcome in order to be heard. Only strong signal will be heard at a maximum clockwise setting.
17. **ENTER SWITCH** : This is used program frequencies in memory.
18. **AF GAIN** : Permits you to adjust the listening level when receiving.
19. **LOCK SWITCH** : This switch is used to lock a selected frequency.
20. **MODE CONTROL** : This control allows you to select one of six flowing operating modes : CW/FM/AM/LSB/USB/PA.
21. **▲ UP SWITCH** : This switch is used to move frequency upward to select a desired frequency.
22. **PHONE JACK** : Used to connect earphone to listening.
23. **POWER LED** : The RED LED indicate the unit is power on.
24. **SIGNAL METER** : The left hand meter provide indication of the signal strength of a received signal in S units during reception.
25. **RF/SWR METER** : Used for two purpose, to indicate relative transmitter power when transmitting and to indicate antenna SWR.
26. **NB/ANL SWITCH** : The noise blacker is very effective in eliminating repetitive impulse noise such as ignition interference. In the ANL position, the automatic noise limiter in the audio circuits is activate.
27. **ROGER BEEP SWITCH** : When this switch is placed in the ROGER BEEP position, you radio automatically transmit the audio sign at the end of you transmission. The listener can note easily your transmission is over through the sign.
28. **SPLIT SWITCH** : This switch enables you to split and operating frequency for FM repeater operation.
29. **PROGRAM SWITCH** : This switch is used to program operating or scanning frequency into memory.
30. **FREQUENCY COUNTER** : The frequency counter indicates the frequency of the selected channel you wish to operate on.
31. **MANUAL SWITCH** : This is used to return to the manual mode.
32. **SHIFT SWITCH** : This is used to select 100 Hz, 1KHz, 10KHz, 100KHz or 1MHz frequency steps.
33. **▼ UP SWITCH** : This switch is used to move frequency down ward to select a desired frequency.

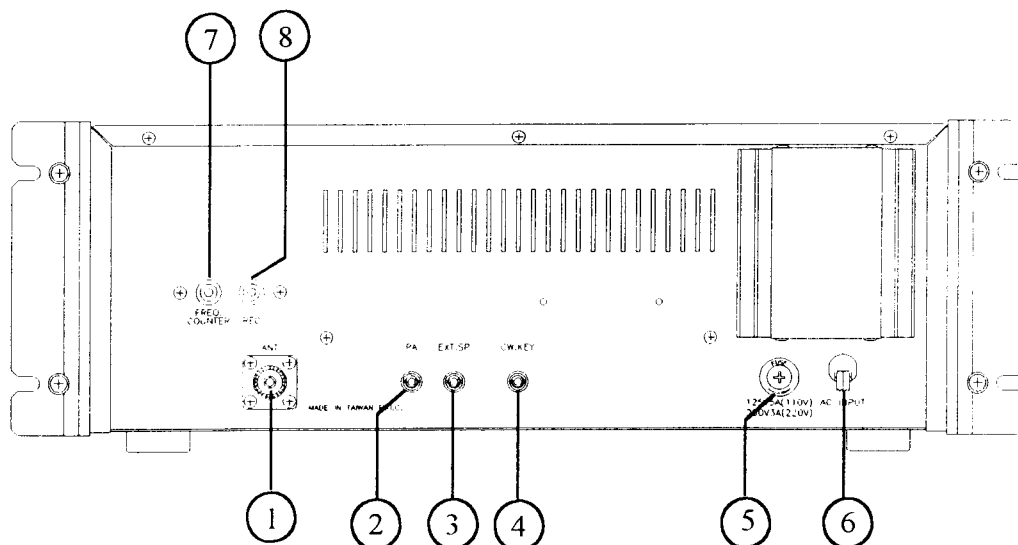

1.2 REAR PANEL CONNECTOR

1. **ANTENNA** : This jack accepts 50 ohm coaxial cable with a PL-259 type plug.
2. **PA SP** : Used to connect a PA speaker (8 ohm 4w) for PA operation. Before operating PA you must first connect a PA speaker to this jack.
3. **EXTERNAL SPEAKER** : This jack accepts 4 to 8 ohm, 5 watt external speaker. When the external speaker is connected to this jack, the built-in speaker will be disabled.
4. **CW KEY** : This is used for Morse Code operation. To operate this mode, connect a CW key to this jack and place the mode switch in the CW position.
5. **FUSE** : Accommodates a fuse for AC input circuit protection. Use 125V 7A or 250V 4A fuse for replacement.
6. **AC POWER CORD** : Connects to AC power outlet for AC mains supply.
7. **FREQUENCY COUNTER JACK** : The RCA-type jack is used to connect an optional frequency counter so that you can watch channel frequency digitally. The frequency counter readout will be possible on transmit only.

8. **RECORDING OUTPUT JACK** : The RCA-type jack provides output for connection to a tape recorder to permit recording of receiver signals or you modulating voice.

1.3 MICROPHONE

The receiver and transmitter are controlled by the push-to-talk switch on the microphone. Press the switch and the transmitter is activated, release switch to receive. When transmitting, hold the microphone two inches from the mouth and speak clearly in a normal "voice". The radios come complete with low-impedance dynamic microphone.

1.4 OPERATION

A. PROCEDURE TO RECEIVE



1. Be sure that power source, microphone and antenna are connected to the proper connectors before going to the next step.
2. Turn unit on by running **VOL** knob clockwise on transceiver.
3. Set the **VOL** for a comfortable listening level.
4. Set the **MODE** switch to the desired mode.
5. Listen to the background noise from the speaker. Turn the **SQ** knob slowly clock-

wise until the noise just disappear. Level the control at this setting. This **SQ** is now properly adjusted. The receiver will remain quiet until a signal is actually received. Do not advance the control too far, or some of weaker signals will not be heard.

6. Set the **CHANNEL** select or switch to the desired channel or frequency.
7. Set the **RF** gain control fully clockwise for maximum **RF** gain.
8. Adjust **CLARIFIER** control to clarify the SSB/CW signals or to optimize AM / FM signals.

B. PROCEDURE TO TRANSMIT

1. Select the desired channel of transmission.
2. Set the **MIC GAIN** control fully clockwise.
3. If the channel is clear, depress the push-to talk switch on the microphone and speak in a normal voice.

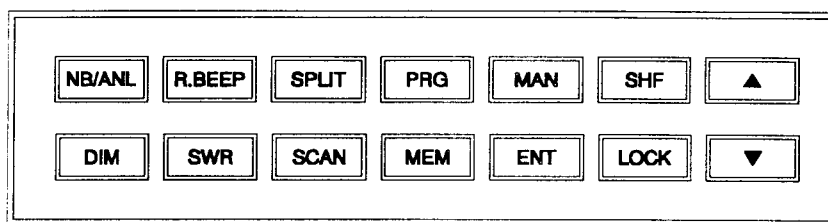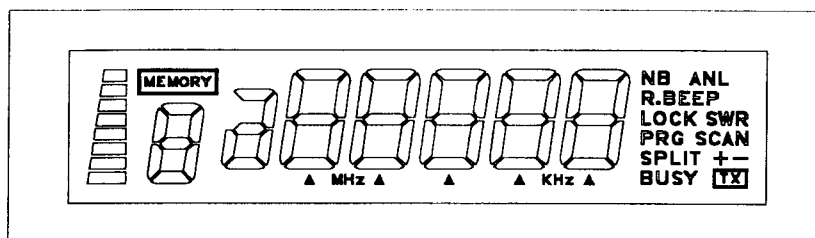

2.0 INTRODUCTION

This section explains the basic programming procedures for the **HERCULE B2950F** III amateur 10 meter mobile transceiver.

2.1 FREQUENCY SELECTION

Frequency selection in the radio can be accomplished using three of the following methods :

1. The first method of frequency selection is through the use of the **SHF** key and the **UP** and **DOWN** arrows. To accomplish this, press the **SHF** button until the cursor arrow is position under the digit of the frequency that is to be changed. Then use the **UP** arrow to increase the number. If a decrease in frequency is desired, press the **DOWN** arrow. Perform the steps described above for each digit of the frequency until the desired frequency is displayed in the **LCD** display windows.
2. The second method of frequency selection is accomplished using the **SHF** button and

the channel select knob located above the front panel. Use the **SHF** button in the manner described above to select the digit to be changed. Then proceed to rotate the channel select knob clockwise to increase the frequency. Rotate the channel select knob counterclockwise to decrease the frequency.

3. The third method of selecting the operating frequency of the radio is through the use of the **SHF** button and the channel **UP** and **DOWN** button located on the microphone. Frequency selection by this method is accomplished in the same manner as with the **UP** and **DOWN** arrows on the key pad. The only difference is that the channel **UP** and **DOWN** buttons on the microphone are used.

While in receive mode, once a signal has been detected on a particular frequency, It may be necessary to slightly change the frequency to provide the best audio through the speaker. This can be accomplished by rotating the clarifier control to

the unit to the manual mode of operation by pressing the **MAN** key.

6. To initiate memory scanning, press **MEM** and then press **SCAN**. As previously discussed, the display will show "**SCAN +**" or "**SCAN -**" to indicate whether the radio is scanning from the lowest the highest memory location or vice versa.
7. To return the radio to normal (non-scanning) operation, press the **MAN** key.

2.3 OFFSET FREQ. OPERATION

The **GX-SATURN III** has an offset or split frequency feature that will permit the radio to be operated in a half-duplex mode. This will allow the user to talk on FM repeaters operating in the 10 meter band. This split frequency function offsets the transmitter frequency either above or below the receive frequency by a user programmable amount. In the following example, programming of a 100KHz offset will be described. Before attempting to program the offset frequency, ensure that the radio is operating in the manual mode by pressing the **MAN** key.

1. Press the **PRG** key.
2. Press the **SPLIT** key. The **LCD** display window will display "**00000**" with "**PRG**" and "**SPLIT**" being displayed in the lower left-hand corner.
3. Using the **SHF** key and the **UP** and **DOWN** arrows as described earlier, program the display to read "**01000**".
4. Press **ENT**. A 100KHz offset has now been programmed into the radio.
5. Return the radio to manual operation by pressing the **MAN** key.
6. Using the **SHF** key and the **UP** and **DOWN** arrows as described previously,

set the radio for the desired receive frequency.

7. Press **SPLIT**. In the lower right corner of the display, either "**SPLIT +**" or "**SPLIT -**" will be displayed. If **SPLIT +** is display, the transmitter will be offset 100KHz above the receive frequency when keyed. If **SPLIT -** is displayed, the transmitter will be offset 100KHz below the receive frequency.

NOTE : When the transmitter is keyed, the frequency display will change to show the frequency being transmitted.

8. To return the radio simplex operation (i.e, same transmit and receive frequency), press the **MAN** key.

CRT HERCULE B2950F

SECTION 3 ALIGNMENT

4.0 TEST EQUIPMENT

1. RF Power Meter (100MHz, 50W).
2. Multimeter.
3. Deviation Meter.
4. Audio Signal Generator.
5. RF Signal Generator (100MHz).
6. Frequency Counter (100MHz).
7. Distortion Meter.
8. Oscilloscope (50MHz).
9. Spectrum Analyzer.

4.1 PLL SYNTHESIZER / OSCILLATOR FREQUENCY ALIGNMENT

ITEM	CONNECTS & SETTING	ADJUST	MEASUREMENT
VCO & OSC	Disconnect the "short PCB" from test point TP1,2 and TP3. Set radio to 28.000MHz, AM mode CLARIFIER Setting in 12 O'clock Connect Frequenct Counter to L61	VC1	10.240MHz $\pm$ 10Hz
	Connect Oscilloscope to L61	L4	Maximum Output
	Connect Frequenct Counter to pin3 of IC14	VC2	10.240MHz $\pm$ 10Hz
	Connect Volt Meter to R203,202	L21	2.0VDC
	Connect Frequency Counter to C169	L21	Lock on 11.10MHz
	Connect Frequency Counter to L26	L23	Lock on 1.135MHz
	Connect Frequency Counter to C188	L24,25	Lock on 11.375MHz
	Connect volt meter to JP13 and ground	L17	2.2VDC $\pm$ 0.1
	Connect Frequency Counter to J86	L17	Lock on 17.305MHz
	Connect Oscilloscope to L62	L19	Maximum Output
AM OSC	Connect Frequency Counter to L62, Then Key Transmitter	VR21	TX & RX same Frequency
	Set radio to 28.000MHz, AM mode Connect freq counter to D45 cathode	L27	10.695MHz $\pm$ 10Hz

ITEM	CONNECTS & SETTING	ADJUST	MEASUREMENT
USB OSC	Set radio to 28.000MHz, USB mode Connect freq counter to D45 cathode and short Q30 (collector, emitter).	L29	10.6925MHz $\pm$ 10Hz
LSB OSC	Set radio to 28.000MHz, LSB mode Connect freq counter to D45 cathode and short Q30 (collector, emitter).	L28	10.6975MHz $\pm$ 10Hz

4.2 RECEIVER ALIGNMENT


ITEM	CONNECTS & SETTING	ADJUST	MEASUREMENT
AM SENSITIVITY	Set radio to 28.000MHz, AM mode CLARIFIER Setting in 12 O'clock RF Gain fully clockwise, SQ at minimum, VOL control at 2 O'clock. Connect RF SG to ANT jack and setting 28.000MHz, MOD 30%, 1.0uV Connect distortion meter to EXT SP jack	L8,9,11,12 13,14,3,4, 5,6	Audio output > 2V S/N 10dB
AM AF OUTPUT	Set radio to 28.000MHz, AM mode VOL control at fully clockwise. RF SG setting 28.000MHz, MOD 30%, 1mV	L5,6	Audio output > 5V Bast at distortion.
FM DISTORTION	Set radio to 28.000MHz, FM mode VOL control at fully clockwise. RF SG setting 28.000MHz, MOD 3KHz, 1mV	L7	Audio output > 5V Bast at distortion.
USB SENSITIVITY	Set radio to 28.000MHz, USB mode VOL control at fully clockwise. RF SG setting 28.001MHz, MOD off, 0.5uV	L15,16	Audio output > 3V S/N 10dB.
LSB SENSITIVITY	Set radio to 28.100MHz, LSB mode VOL control at fully clockwise. RF SG setting 28.099MHz, MOD off, 0.5uV	L15,16	Audio output > 3V S/N 10dB.
NB ADJUST	Set radio to 28.000MHz, AM mode RF SG setting 28.010MHz, MOD 30%, 1mV, NB/ANL switch on. Connect volt meter to D2 cathode.	L1,2	DC voltage to MAX (About > 2.5V)
AM SQUELCH	Set radio to 28.000MHz, AM mode SQ control at fully clockwise. RF SG setting 28.000MHz, MOD 30%, 1mV	VR4 Slowly	Adjust very slowly until squelch just open.

ITEM	CONNECTS & SETTING	ADJUST	MEASUREMENT
SSB SQUELCH	Set radio to 28.000MHz, USB mode SQ control at fully clockwise. RF SG setting 28.001MHz, MOD off, 1mV	VR3 Slowly	Adjust very slowly until squench just open.
AM S/RF METER	Set radio to 28.000MHz, AM mode Meter switch at S/RF position. RF SG setting 28.000MHz, MOD 30%, 100uV	VR1	Meter needle to S9 on the S scale.
SSB S/RF METER	Set radio to 28.000MHz, USB mode S/RF switch at S/RF position. RF SG setting 28.001MHz, MOD off, 100uV	VR2	Meter needle to S9 on the S scale.


4.3 TRANSMITTER ALIGNMENT

ITEM	CONNECTS & SETTING	ADJUST	MEASUREMENT
SSB TX POWER	Set radio to 28.000MHz, AM mode MIC, RF POWER Gain fully clockwise, Connect "short PCB" to TP1,2 and 3 Connect RF power meter to ANT jack Audio signal 30mV, 1KHz to MIC. Adjust VR12 fully clockwise. Connect Volt Meter to TP1.	VR13	DC6V
	Set radio to USB mode	L43,46,47, 48	Maximum output
	Set radio to 29.699MHz, USB mode	L19,43 L34	Maximum output Same as 28MHz power
	Set radio to 28.000MHz, USB mode	VR12	22 ~ 28W
	RF POWER Gain Counterclockwise	VR16	9 ~ 12W
AM TX POWER	Set radio to 28.000MHz, AM mode RF Gain fully clockwise, No MOD	VR13	7 ~ 11W
	RF POWER Gain Counterclockwise	VR15	0.7 ~ 1.3W
AM MODULATION	Set radio to 28.000MHz, AM mode Audio signal 30mV, 1KHz to MIC.	VR14 VR11	70 ~ 90% Maximum output
TX S/RF METER	Set radio to 28.000MHz, AM mode MIC Gain at minimum position.	VR8	Meter needle to the same scale of the power meter readed.


BLOCK DIAGRAM




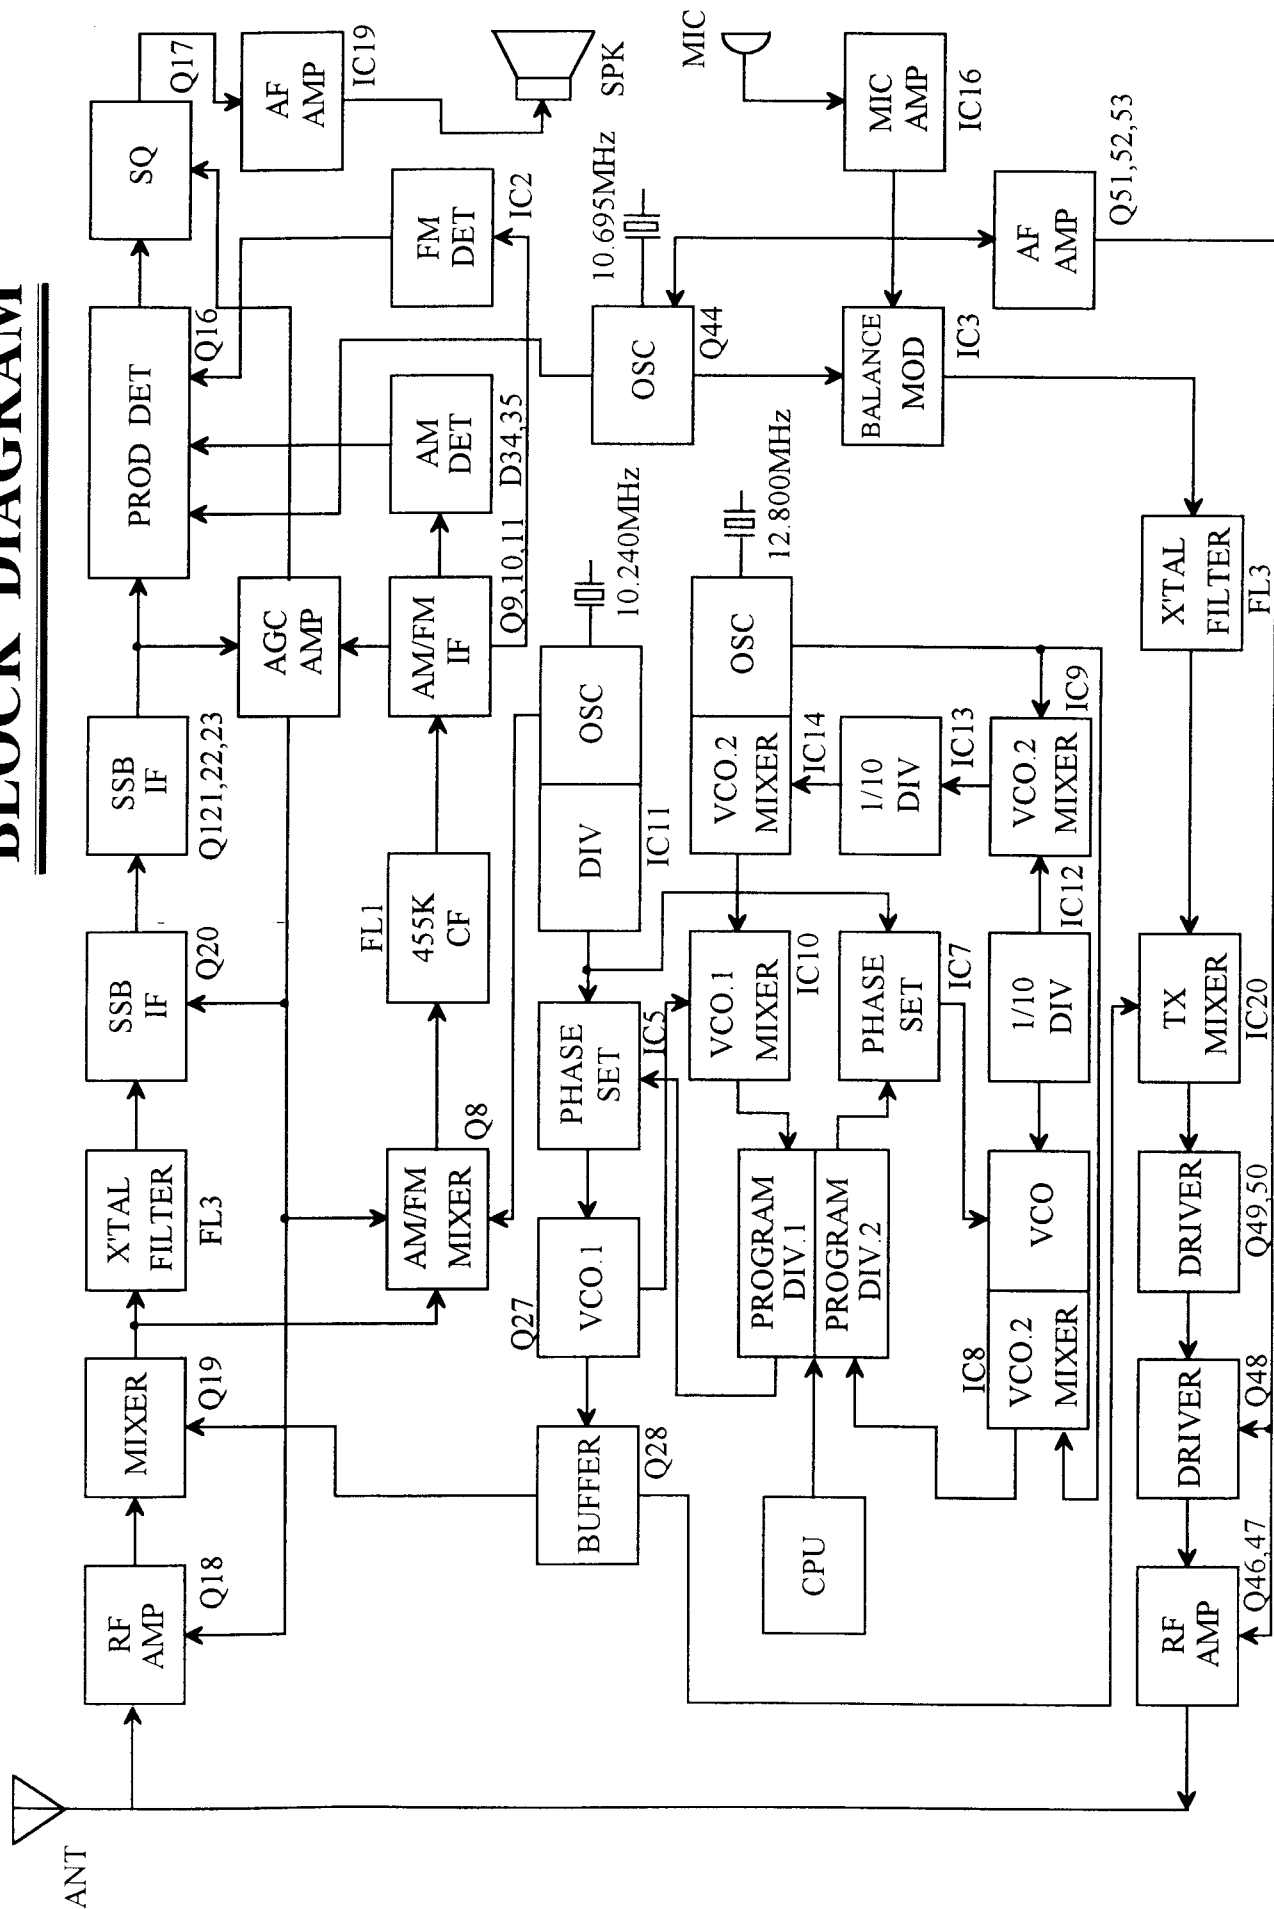


POWER & FUNCTION PCB LAYOUT

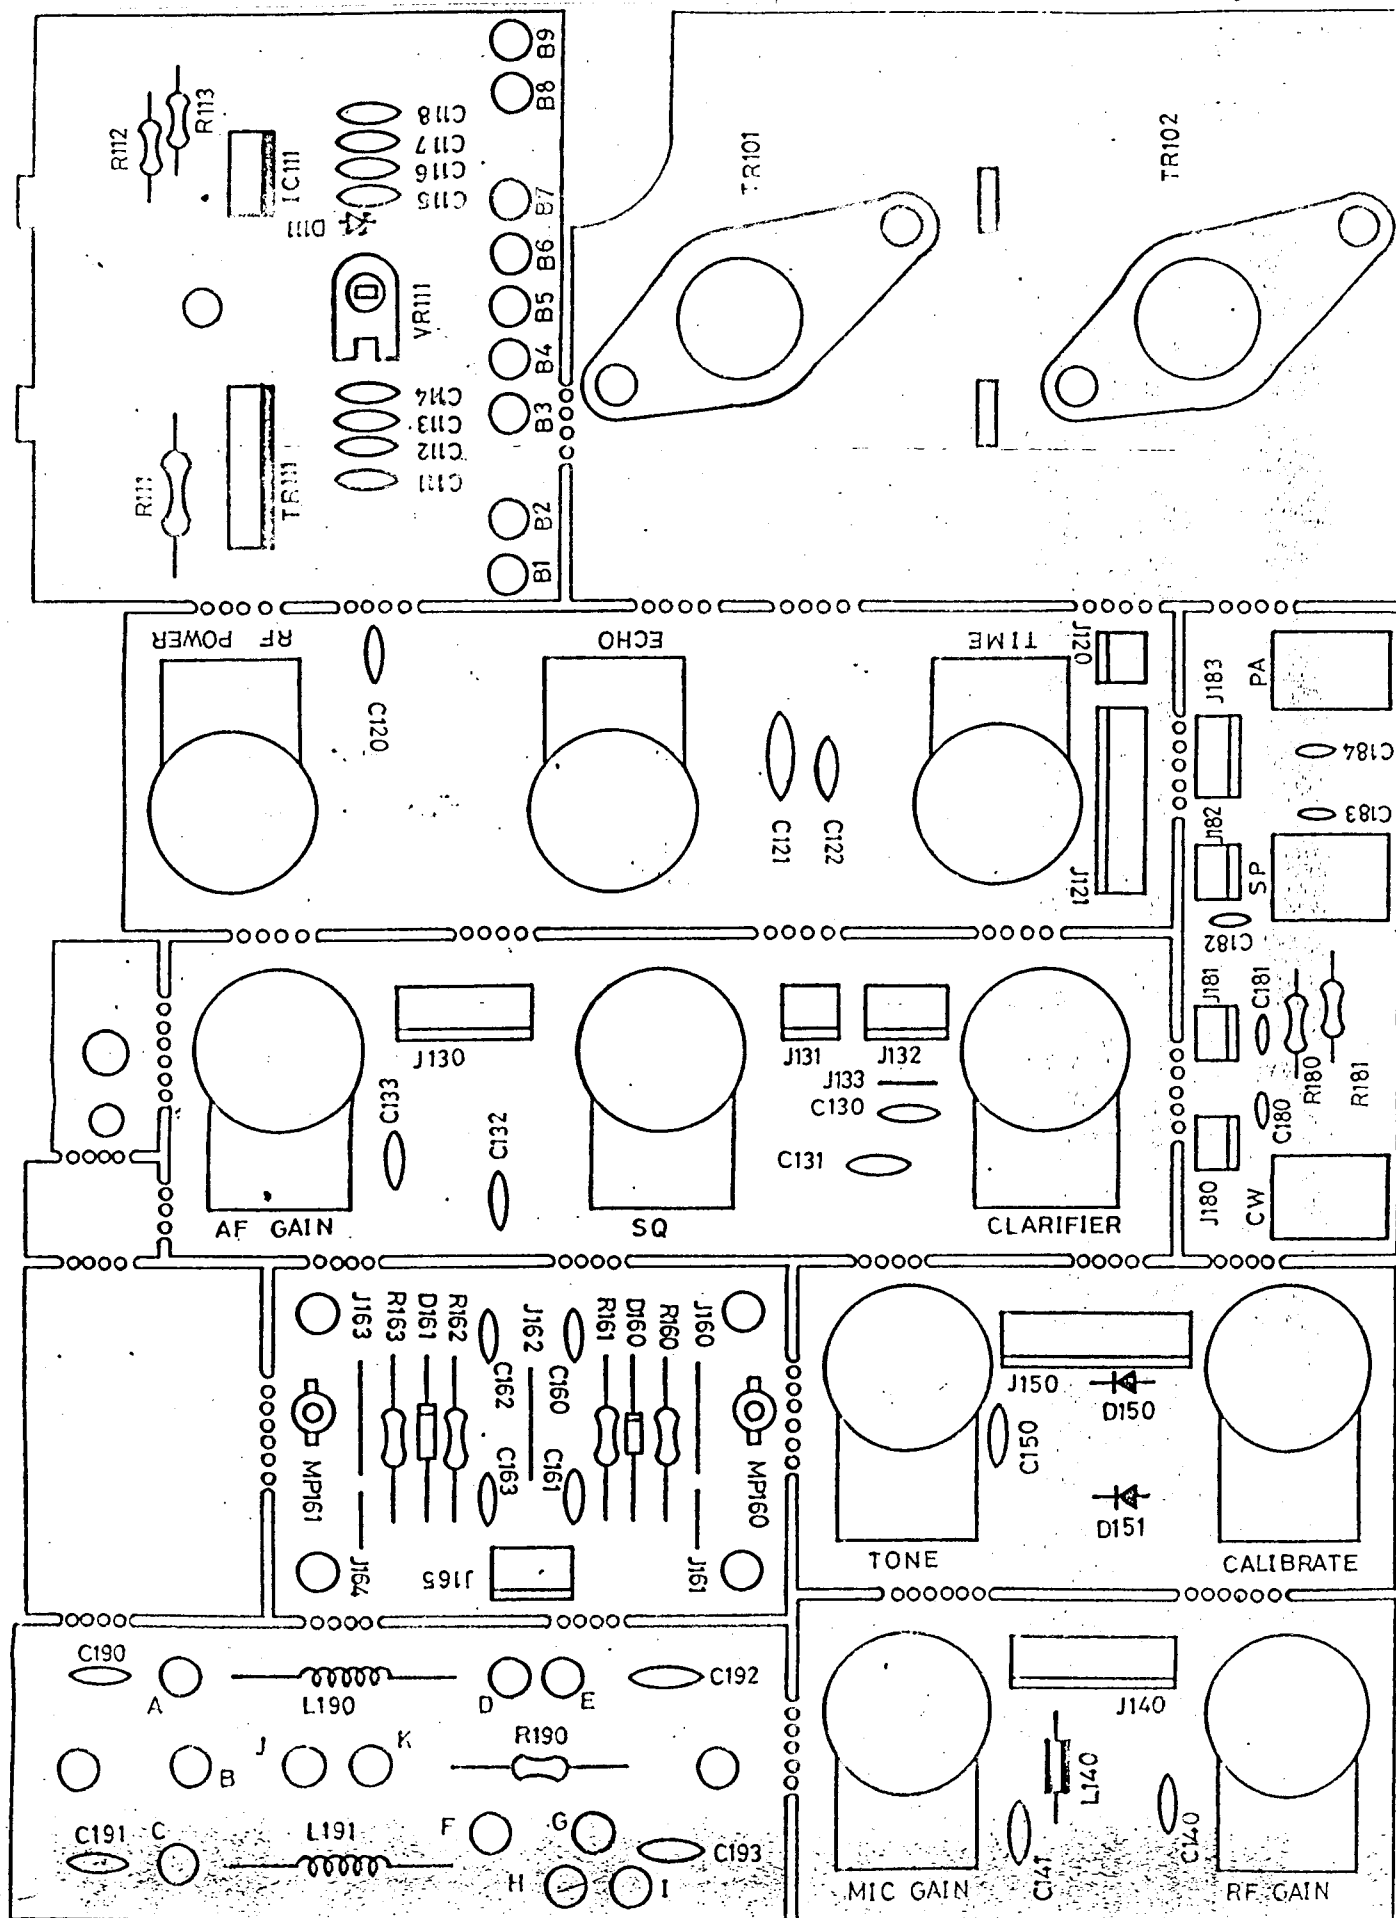


POWER & FUNCTION PCB LAYOUT



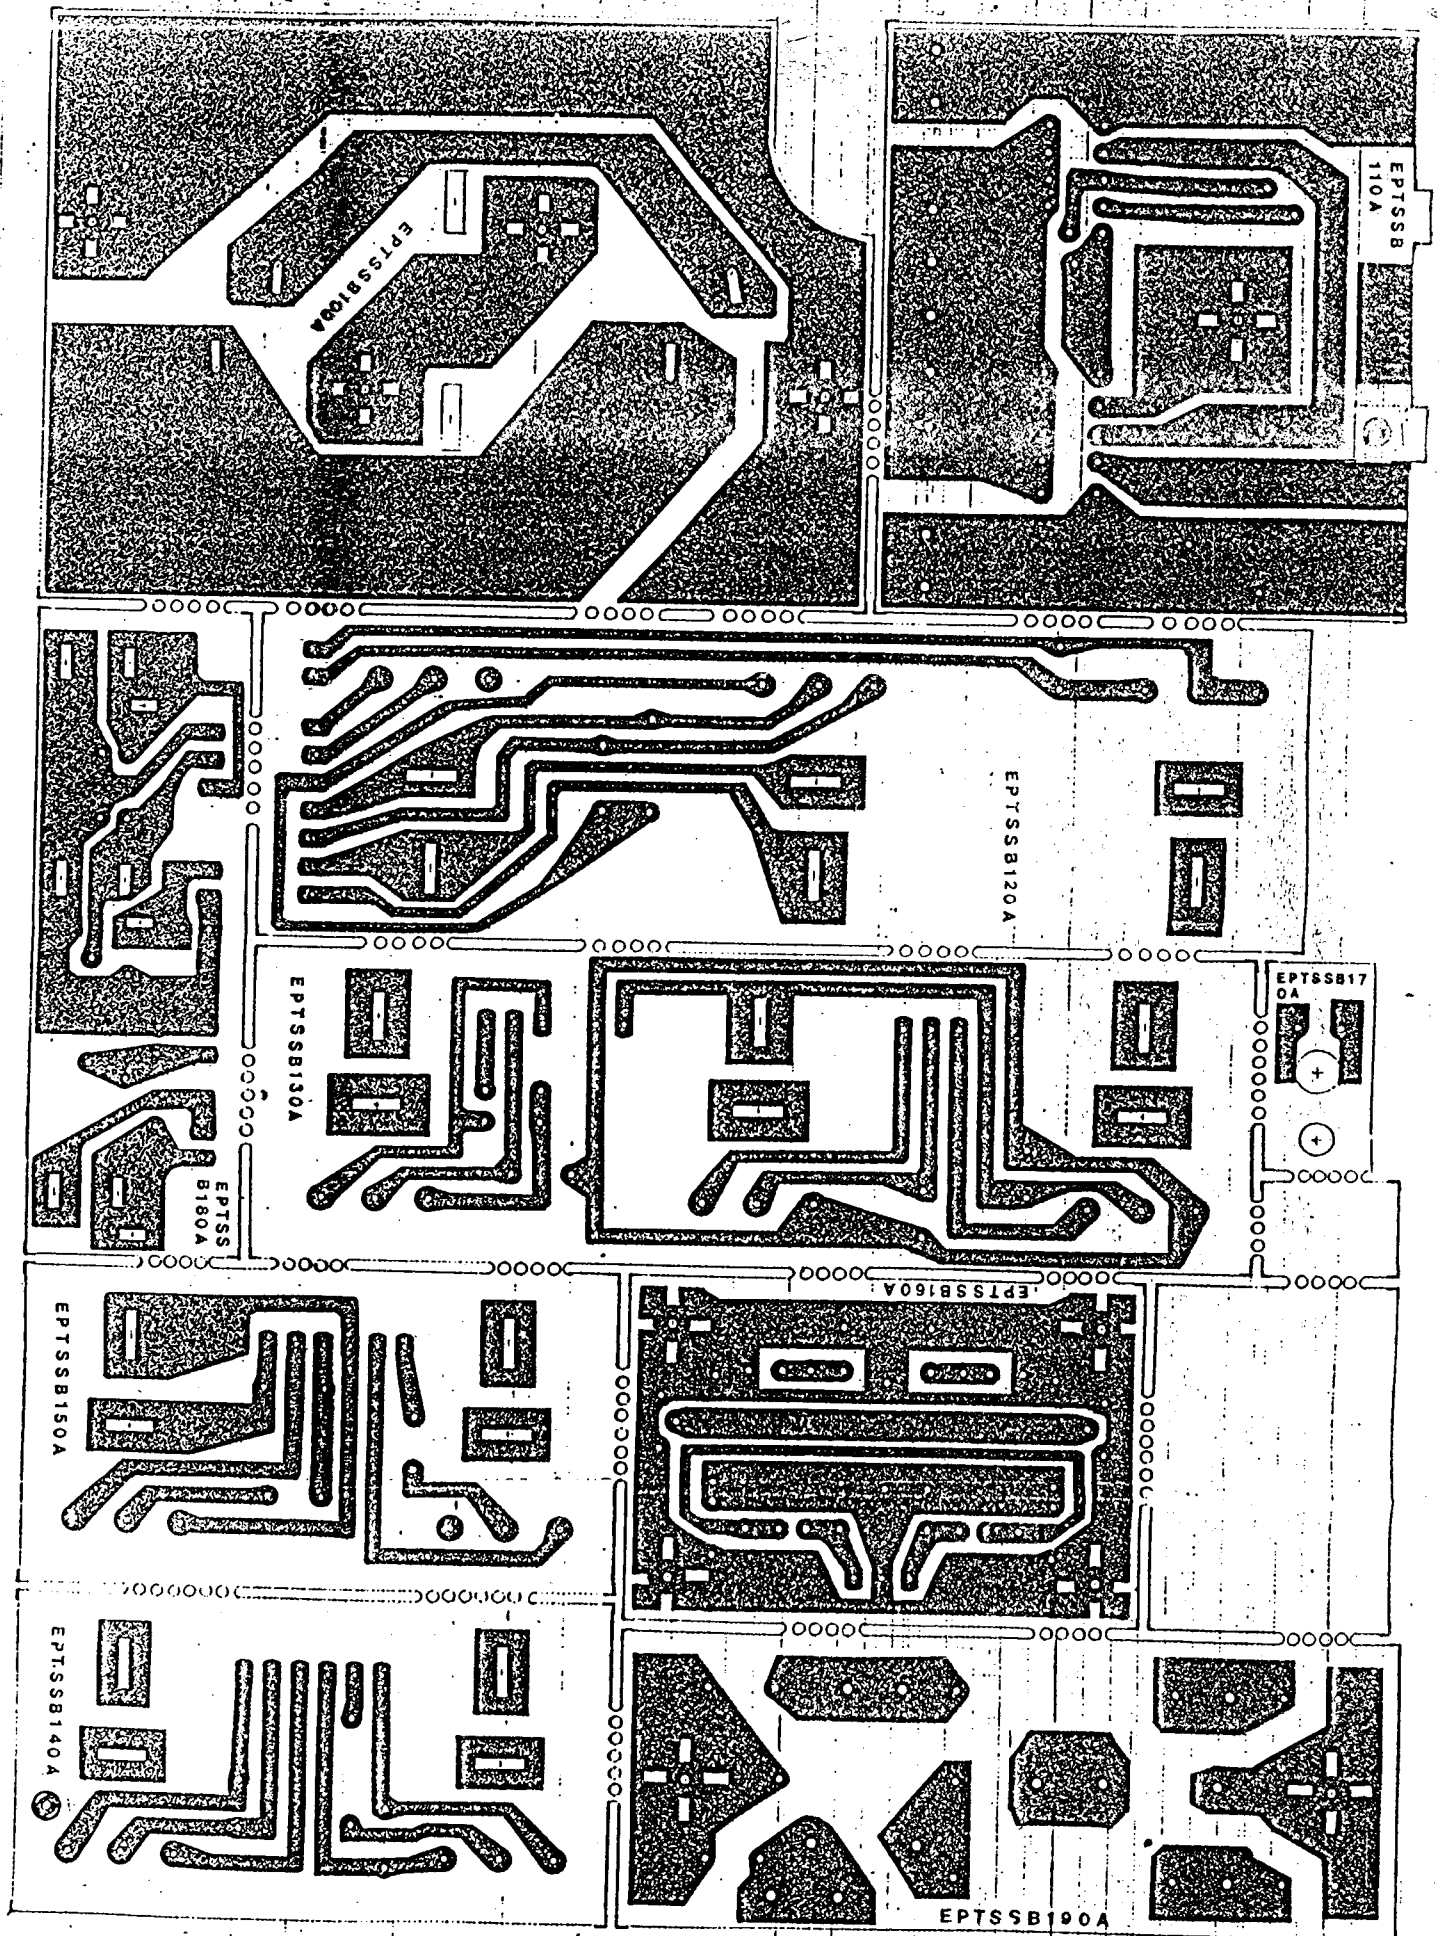


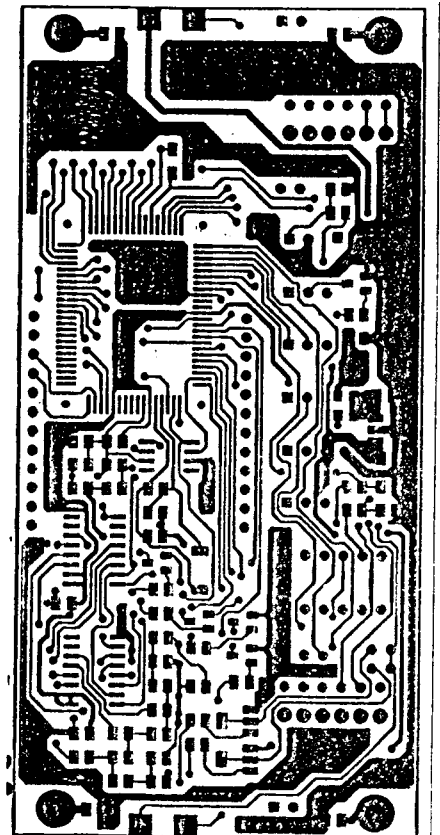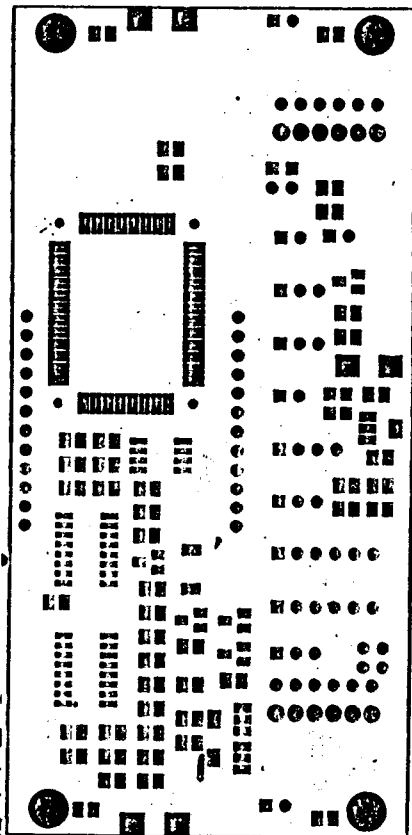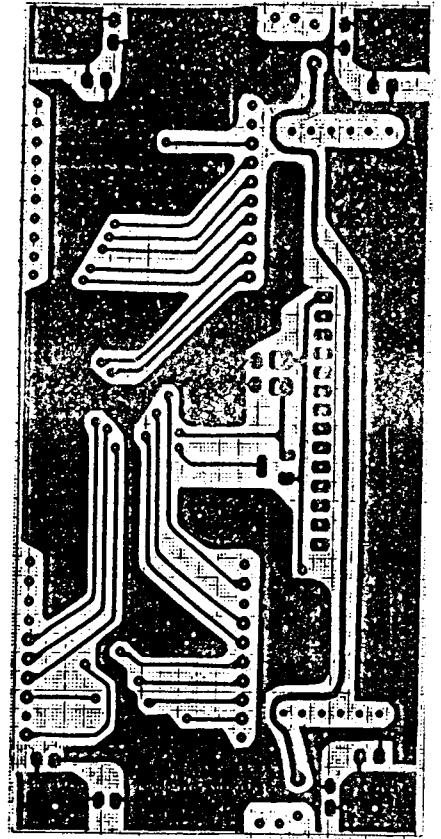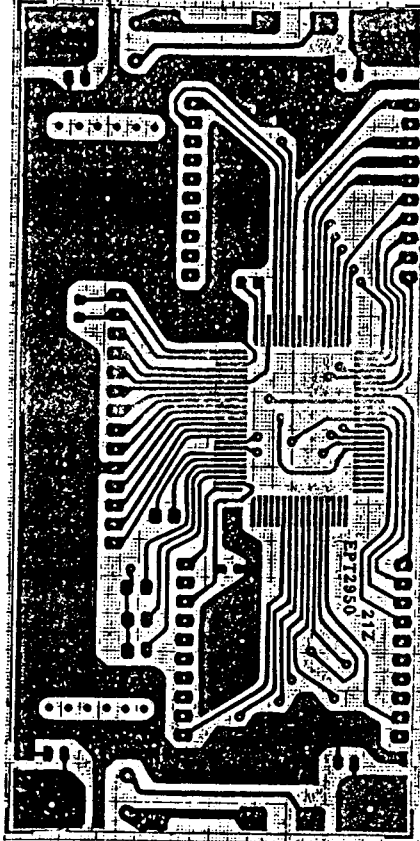



ECHO PCB LAYOUT

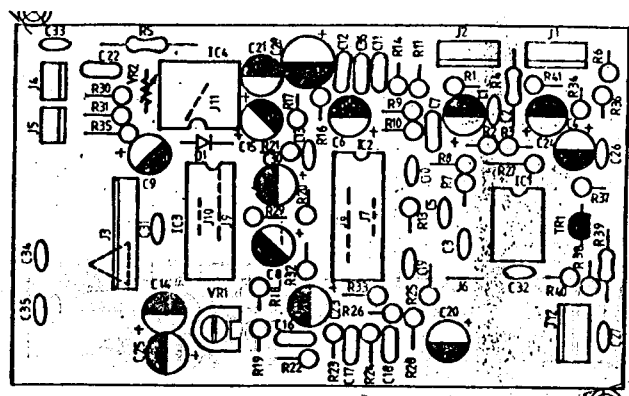




BAND PCB LAYOUT

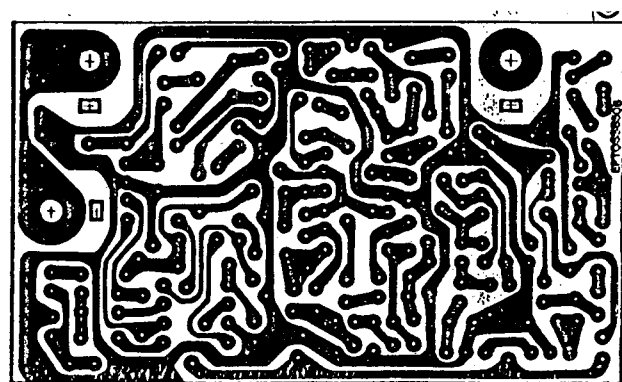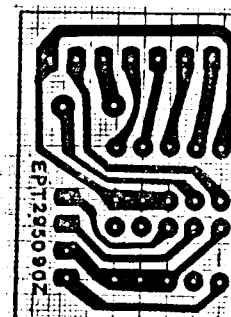
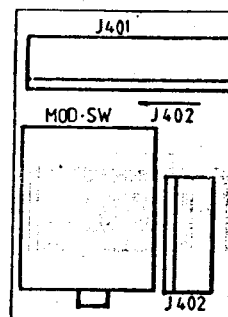


MIC PCB LAYOUT

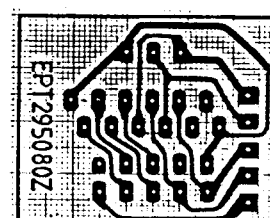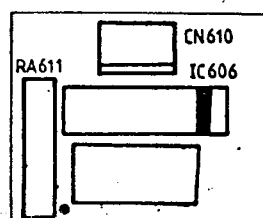

KEY BOARD LAYOUT

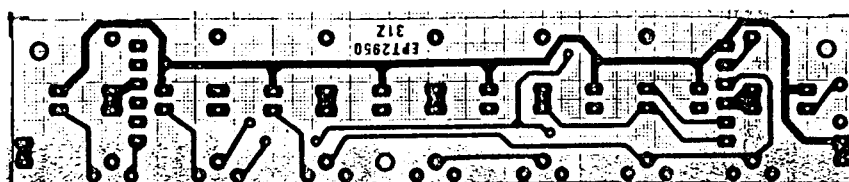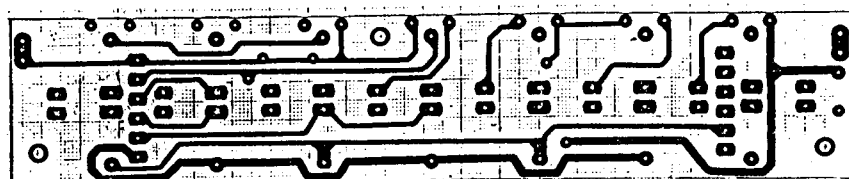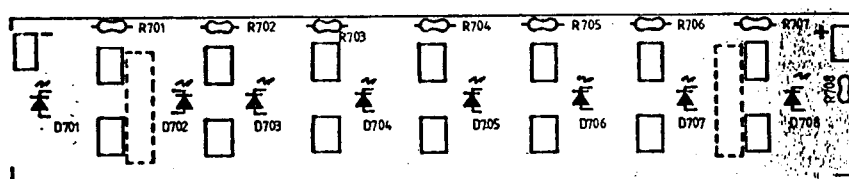


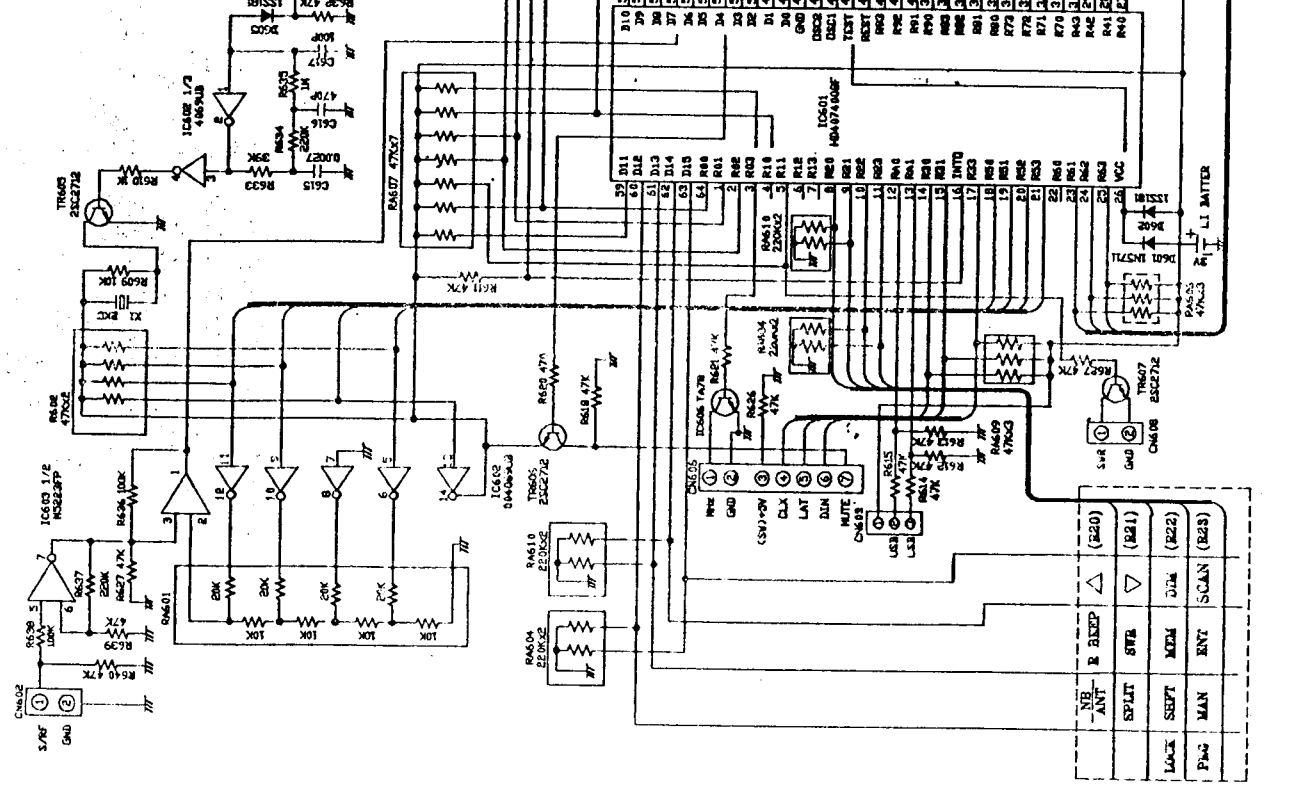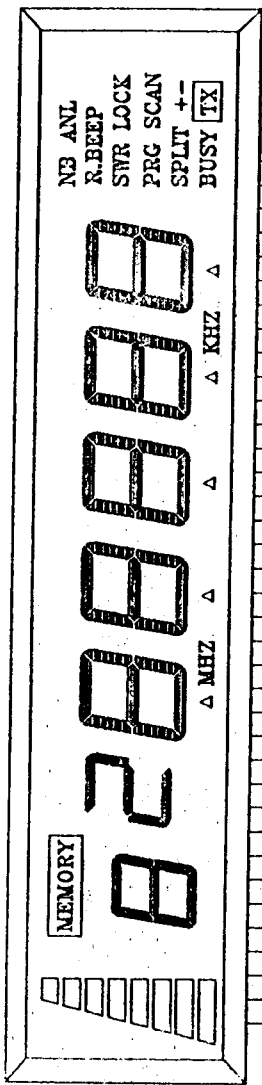


NO	CHRG	CON1
1	7C	7A
2	MEMORY	7B
3	7D	7C
4	7E	7D
5	7F	7E
6	7G	7F
7	7H	7G
8	7I	7H
9	7J	7I
10	7K	7J
11	7L	7K
12	7M	7L
13	7N	7M
14	7O	7N
15	7P	7O
16	7Q	7P
17	7R	7Q
18	7S	7R
19	7T	7S
20	7U	7T
21	7V	7U
22	7W	7V
23	7X	7W
24	7Y	7X
25	7Z	7Y
26	7A	7Z
27	7B	7A
28	7C	7B
29	7D	7C
30	7E	7D
31	7F	7E
32	7G	7F
33	7H	7G
34	7I	7H
35	7J	7I
36	7K	7J
37	7L	7K
38	7M	7L
39	7N	7M
40	7O	7N
41	7P	7O
42	7Q	7P
43	7R	7Q
44	7S	7R
45	7T	7S
46	7U	7T
47	7V	7U
48	7W	7V
49	7X	7W
50	7Y	7X
51	7Z	7Y
52	7A	7Z
53	7B	7A
54	7C	7B
55	7D	7C
56	7E	7D
57	7F	7E
58	7G	7F
59	7H	7G
60	7I	7H
61	7J	7I
62	7K	7J
63	7L	7K
64	7M	7L
65	7N	7M
66	7O	7N
67	7P	7O
68	7Q	7P
69	7R	7Q
70	7S	7R
71	7T	7S
72	7U	7T
73	7V	7U
74	7W	7V
75	7X	7W
76	7Y	7X
77	7Z	7Y
78	7A	7Z
79	7B	7A
80	7C	7B
81	7D	7C
82	7E	7D
83	7F	7E
84	7G	7F
85	7H	7G
86	7I	7H
87	7J	7I
88	7K	7J
89	7L	7K
90	7M	7L
91	7N	7M
92	7O	7N
93	7P	7O
94	7Q	7P
95	7R	7Q
96	7S	7R
97	7T	7S
98	7U	7T
99	7V	7U
100	7W	7V

MODEL	BCT-2500 (CONTROLL)
TITLE	SCHEMATIC DIAGRAM
DATE	1971
APPROVED	CHECKED
BY	BY
NO	NO


NE	R	BEEP	Δ	(R20)
ANT	SWR	LOCK	Δ	(R21)
SPLIT	MEM	SCAN	Δ	(R22)
SEPT	MAN	ENT	Δ	(R23)

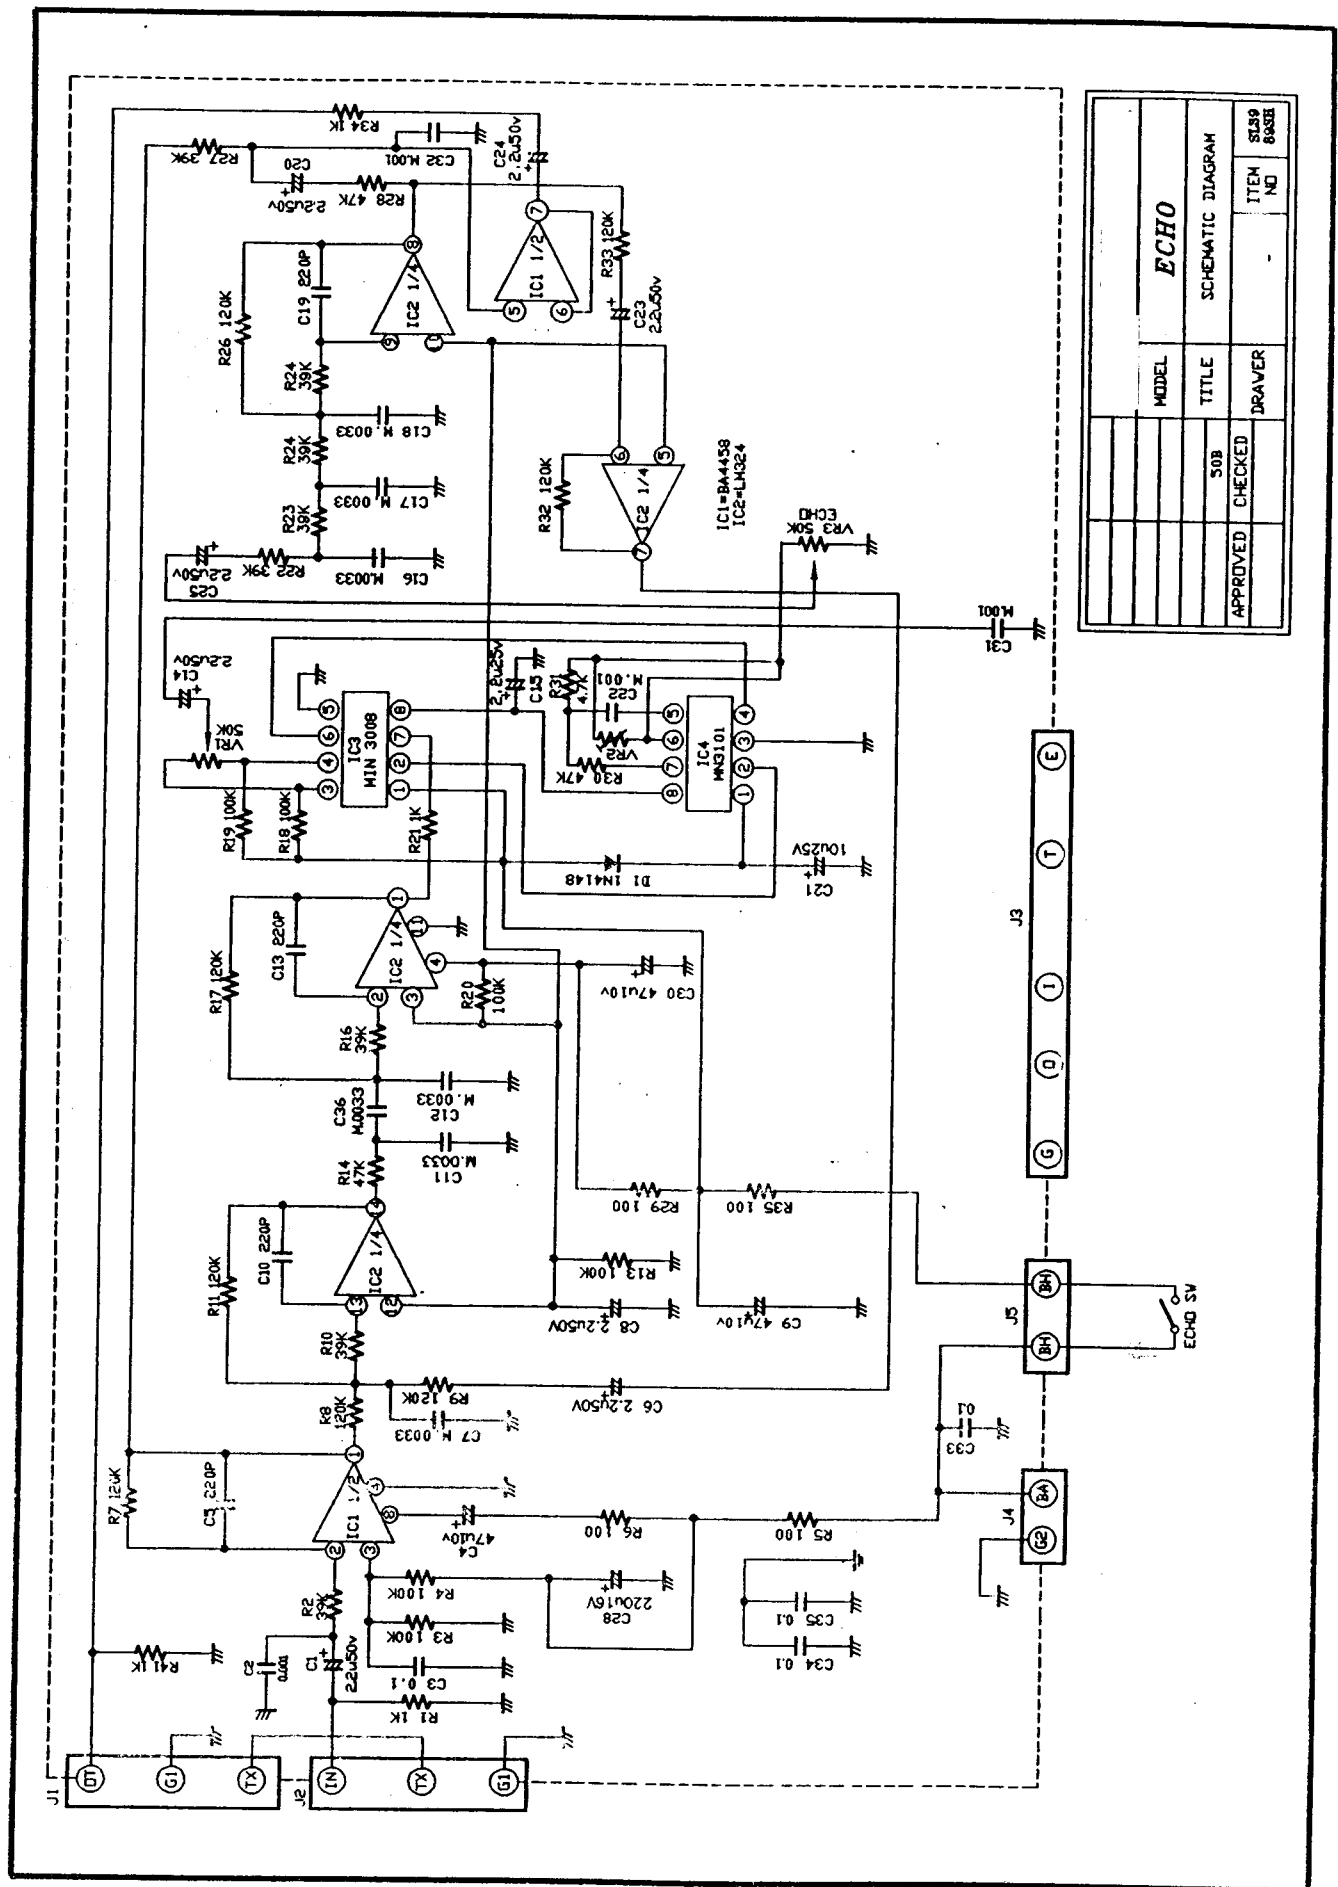

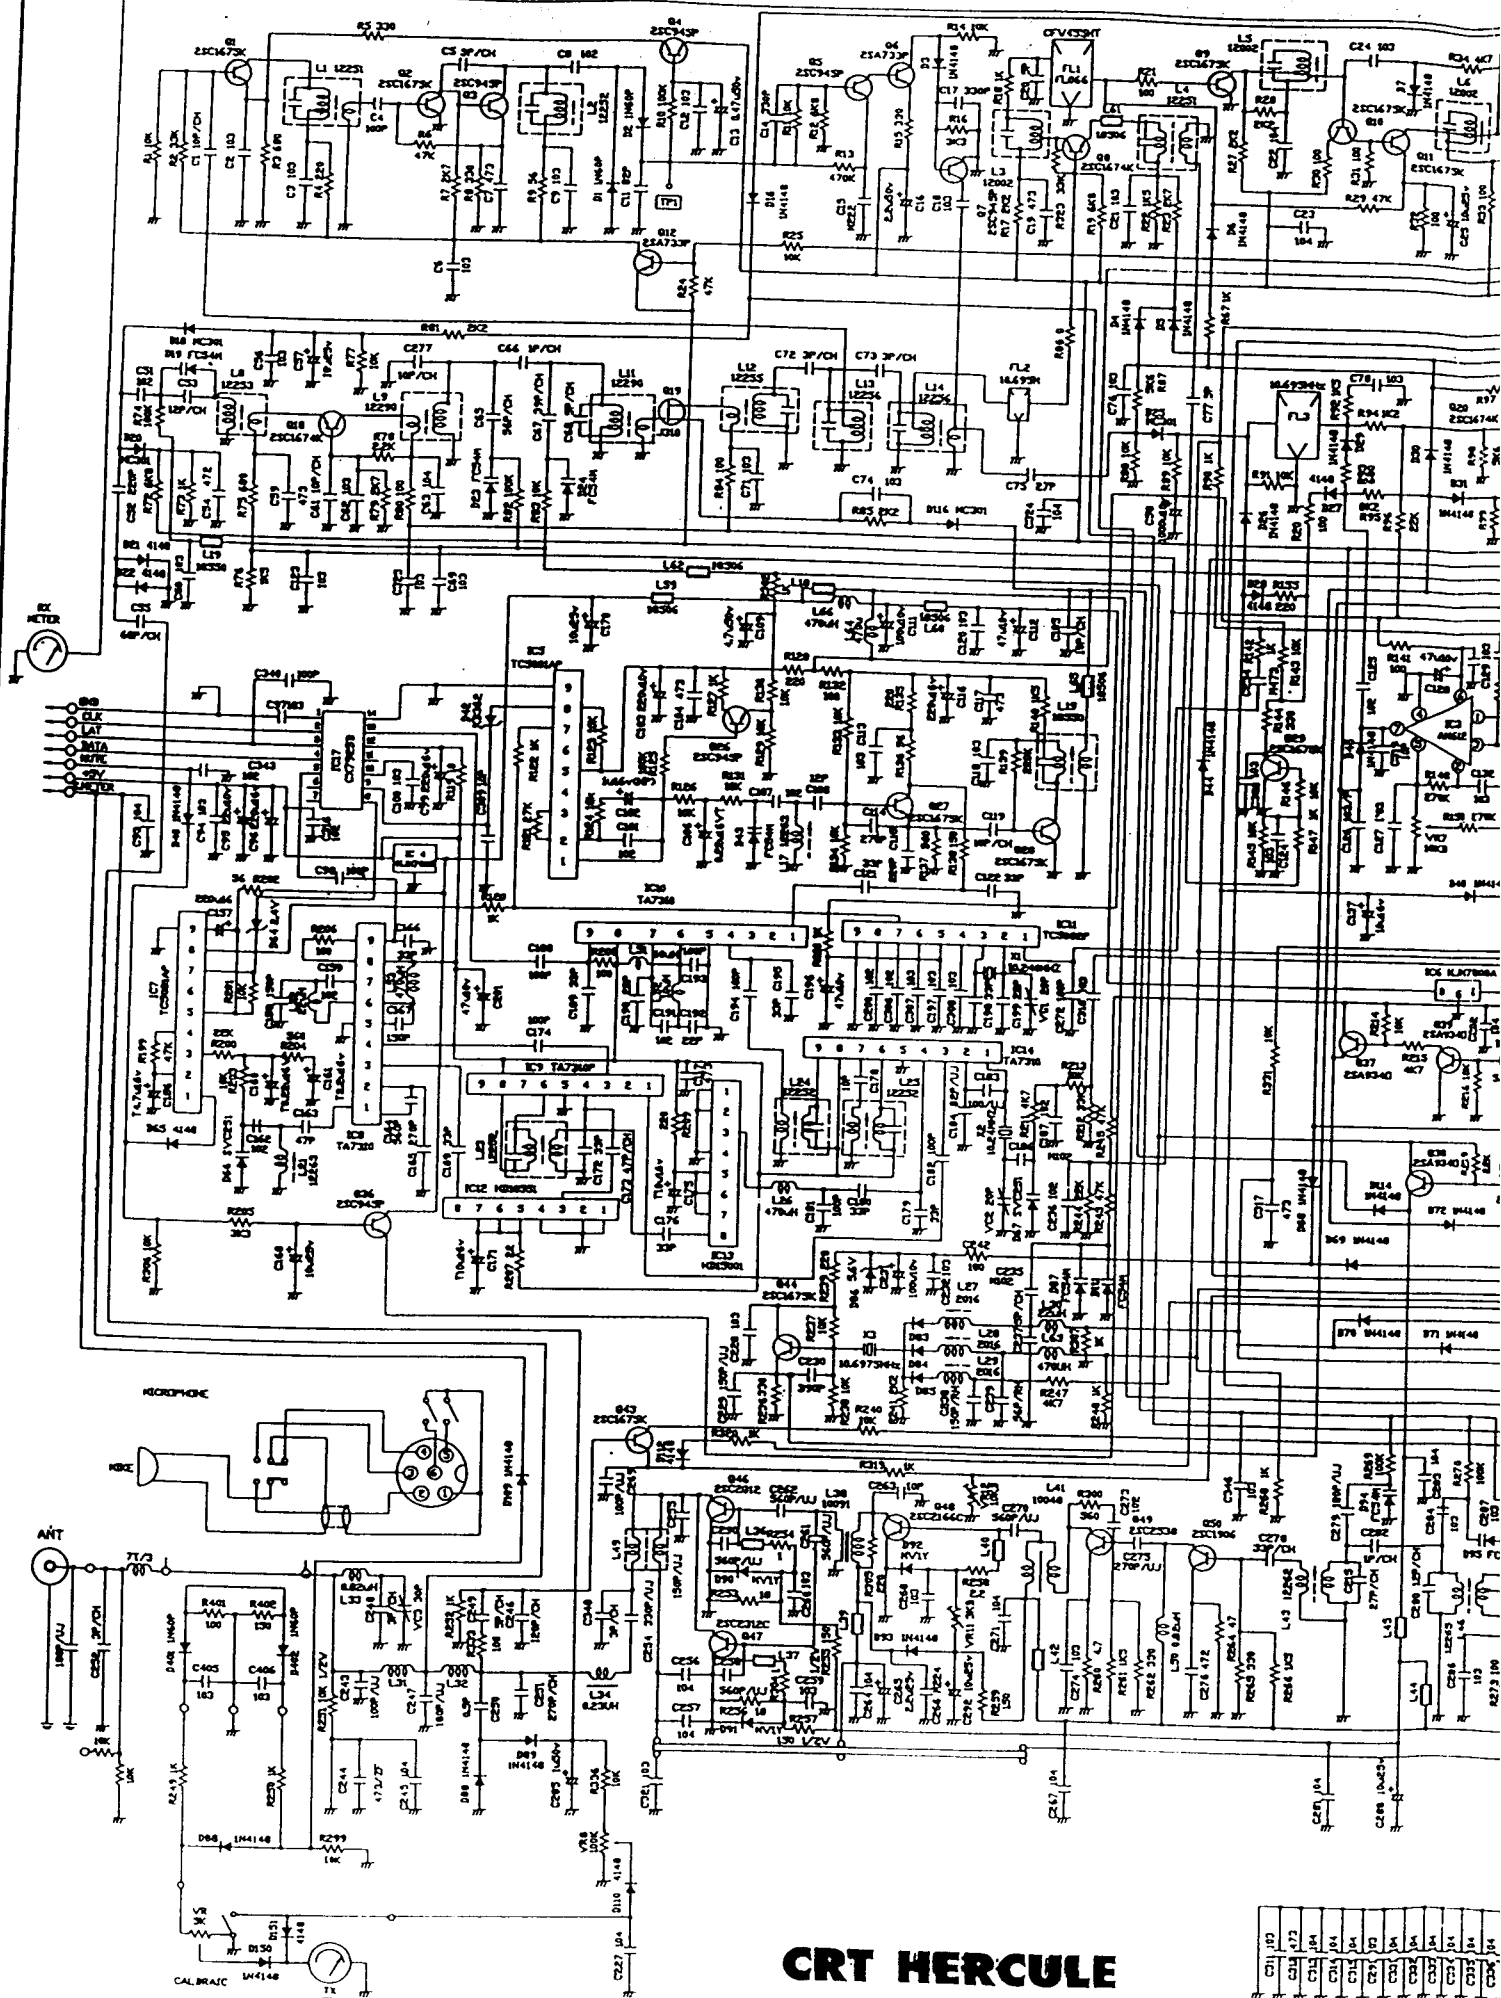


CRT HERCULE


C11	100
C12	100
C13	100
C14	100
C15	100
C16	100
C17	100
C18	100
C19	100
C20	100
C21	100
C22	100
C23	100
C24	100
C25	100
C26	100
C27	100
C28	100
C29	100
C30	100
C31	100
C32	100
C33	100
C34	100
C35	100
C36	100
C37	100
C38	100
C39	100
C40	100
C41	100
C42	100
C43	100
C44	100
C45	100
C46	100
C47	100
C48	100
C49	100
C50	100
C51	100
C52	100
C53	100
C54	100
C55	100
C56	100
C57	100
C58	100
C59	100
C60	100
C61	100
C62	100
C63	100
C64	100
C65	100
C66	100
C67	100
C68	100
C69	100
C70	100
C71	100
C72	100
C73	100
C74	100
C75	100
C76	100
C77	100
C78	100
C79	100
C80	100
C81	100
C82	100
C83	100
C84	100
C85	100
C86	100
C87	100
C88	100
C89	100
C90	100
C91	100
C92	100
C93	100
C94	100
C95	100
C96	100
C97	100
C98	100
C99	100
C100	100

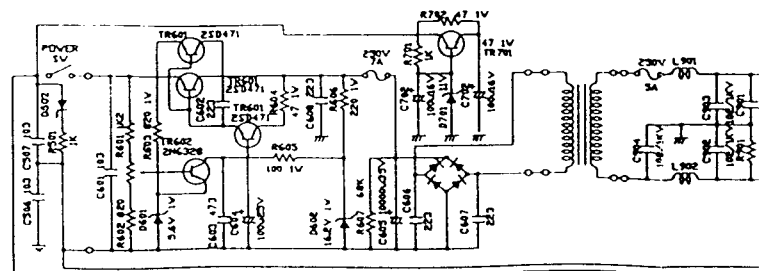

011	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	00	01	02	03	04	05	06	07	08	09	10	11
-----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----


1C

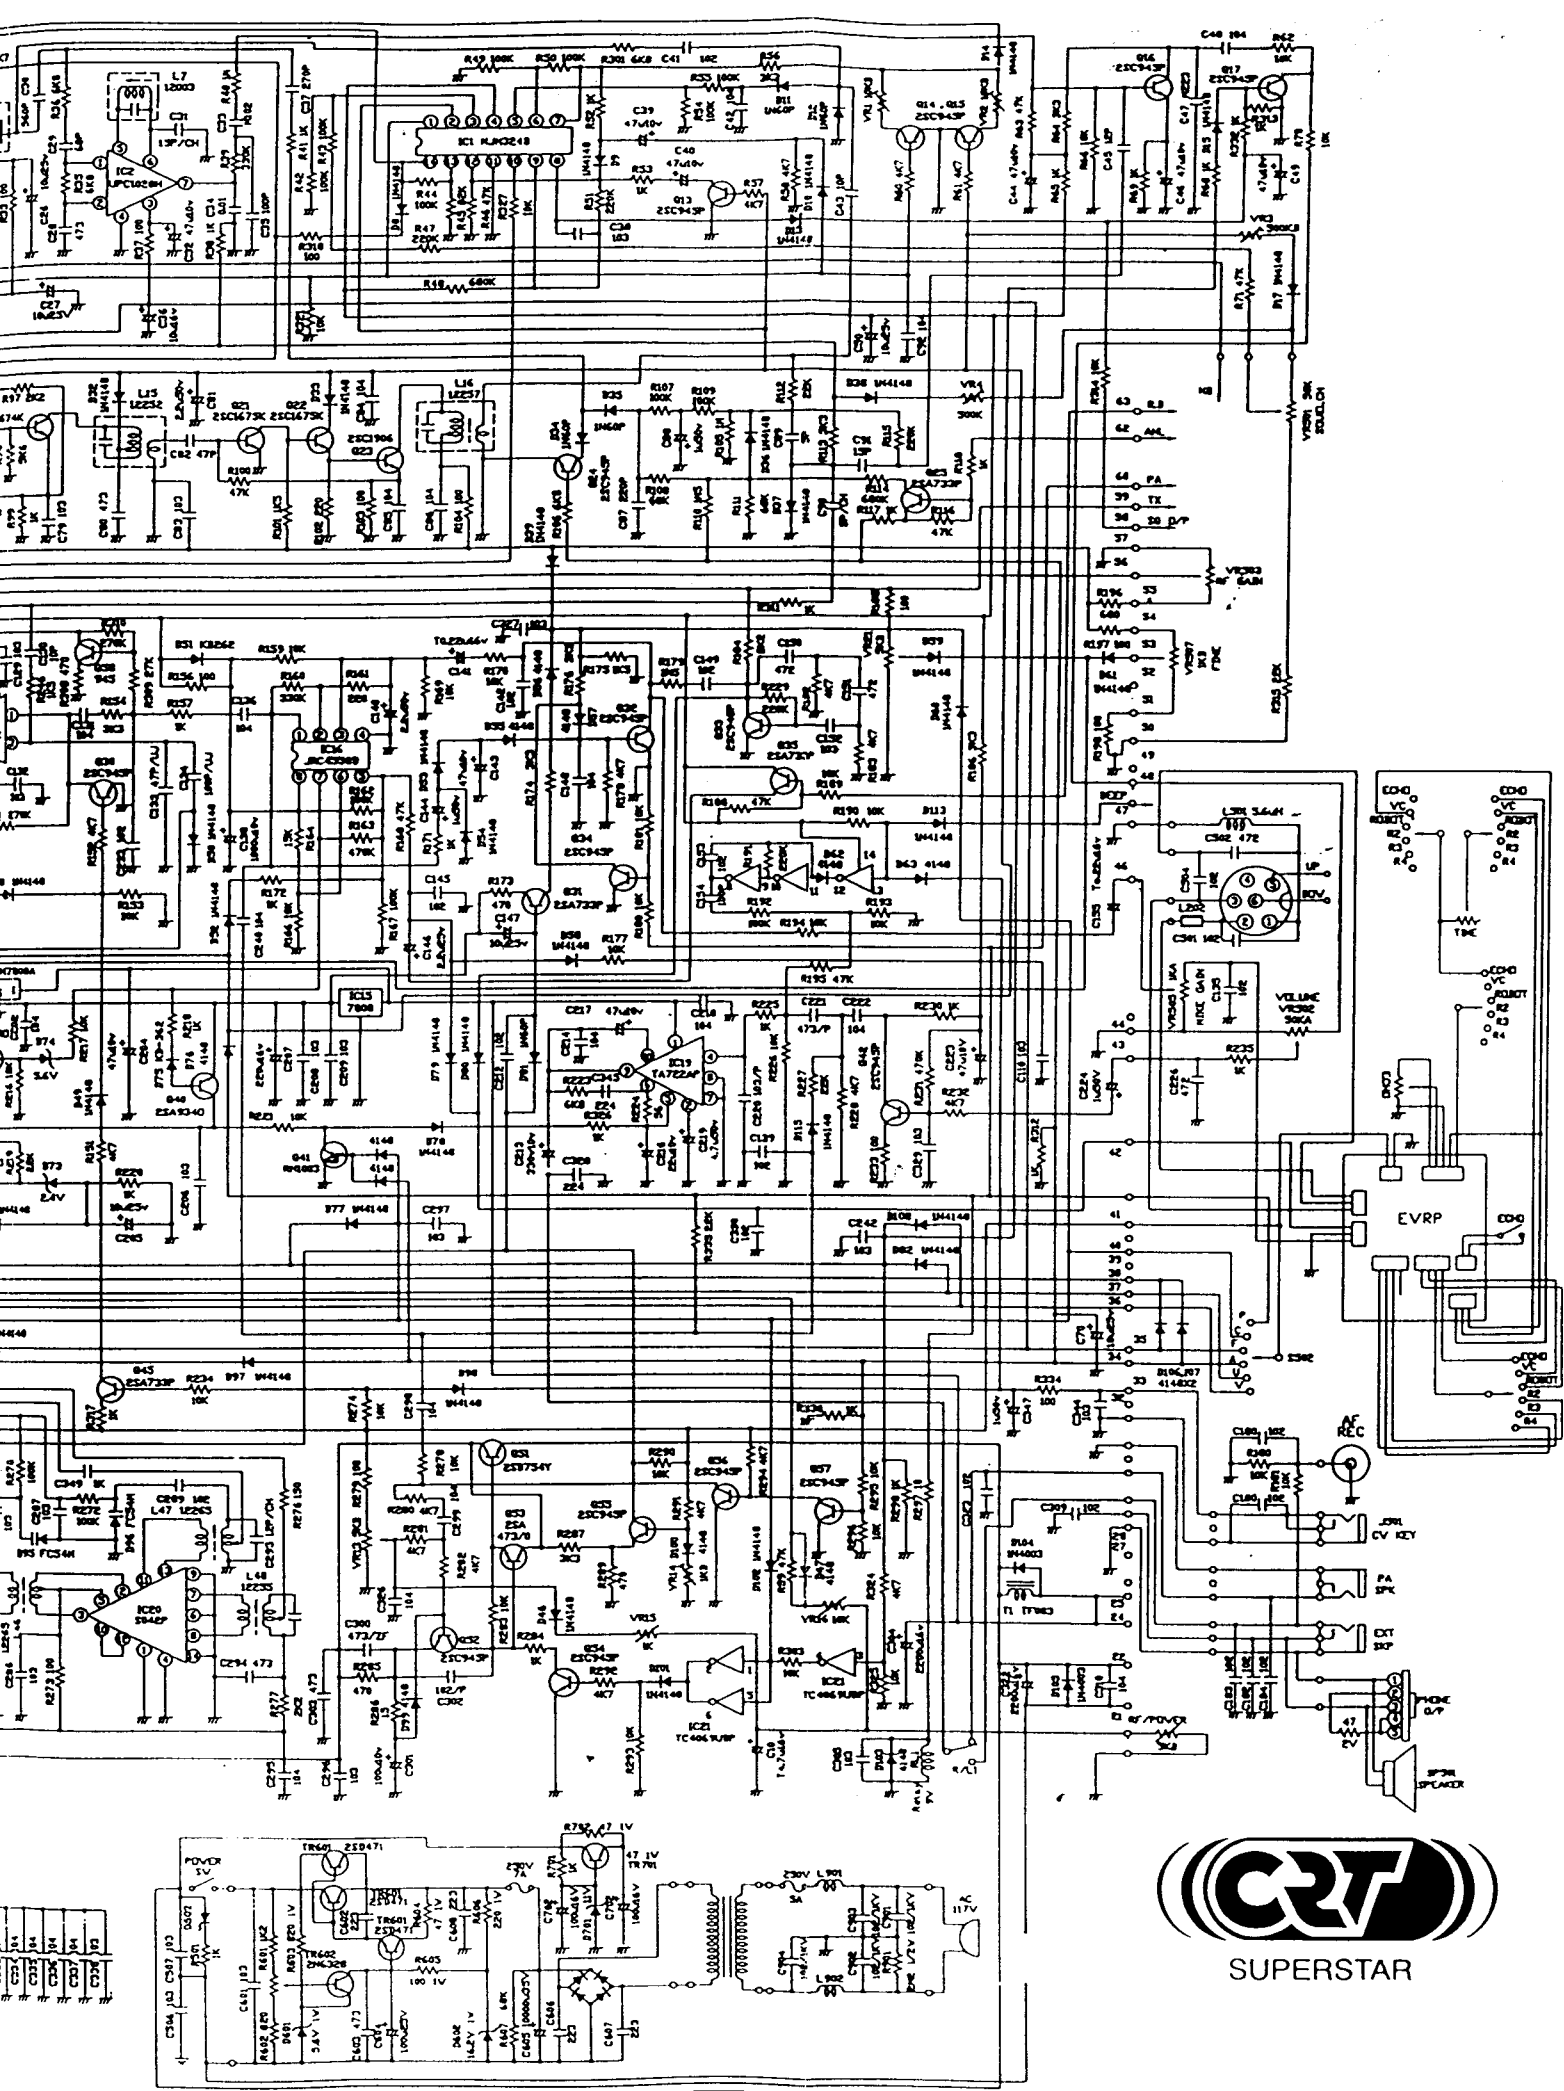

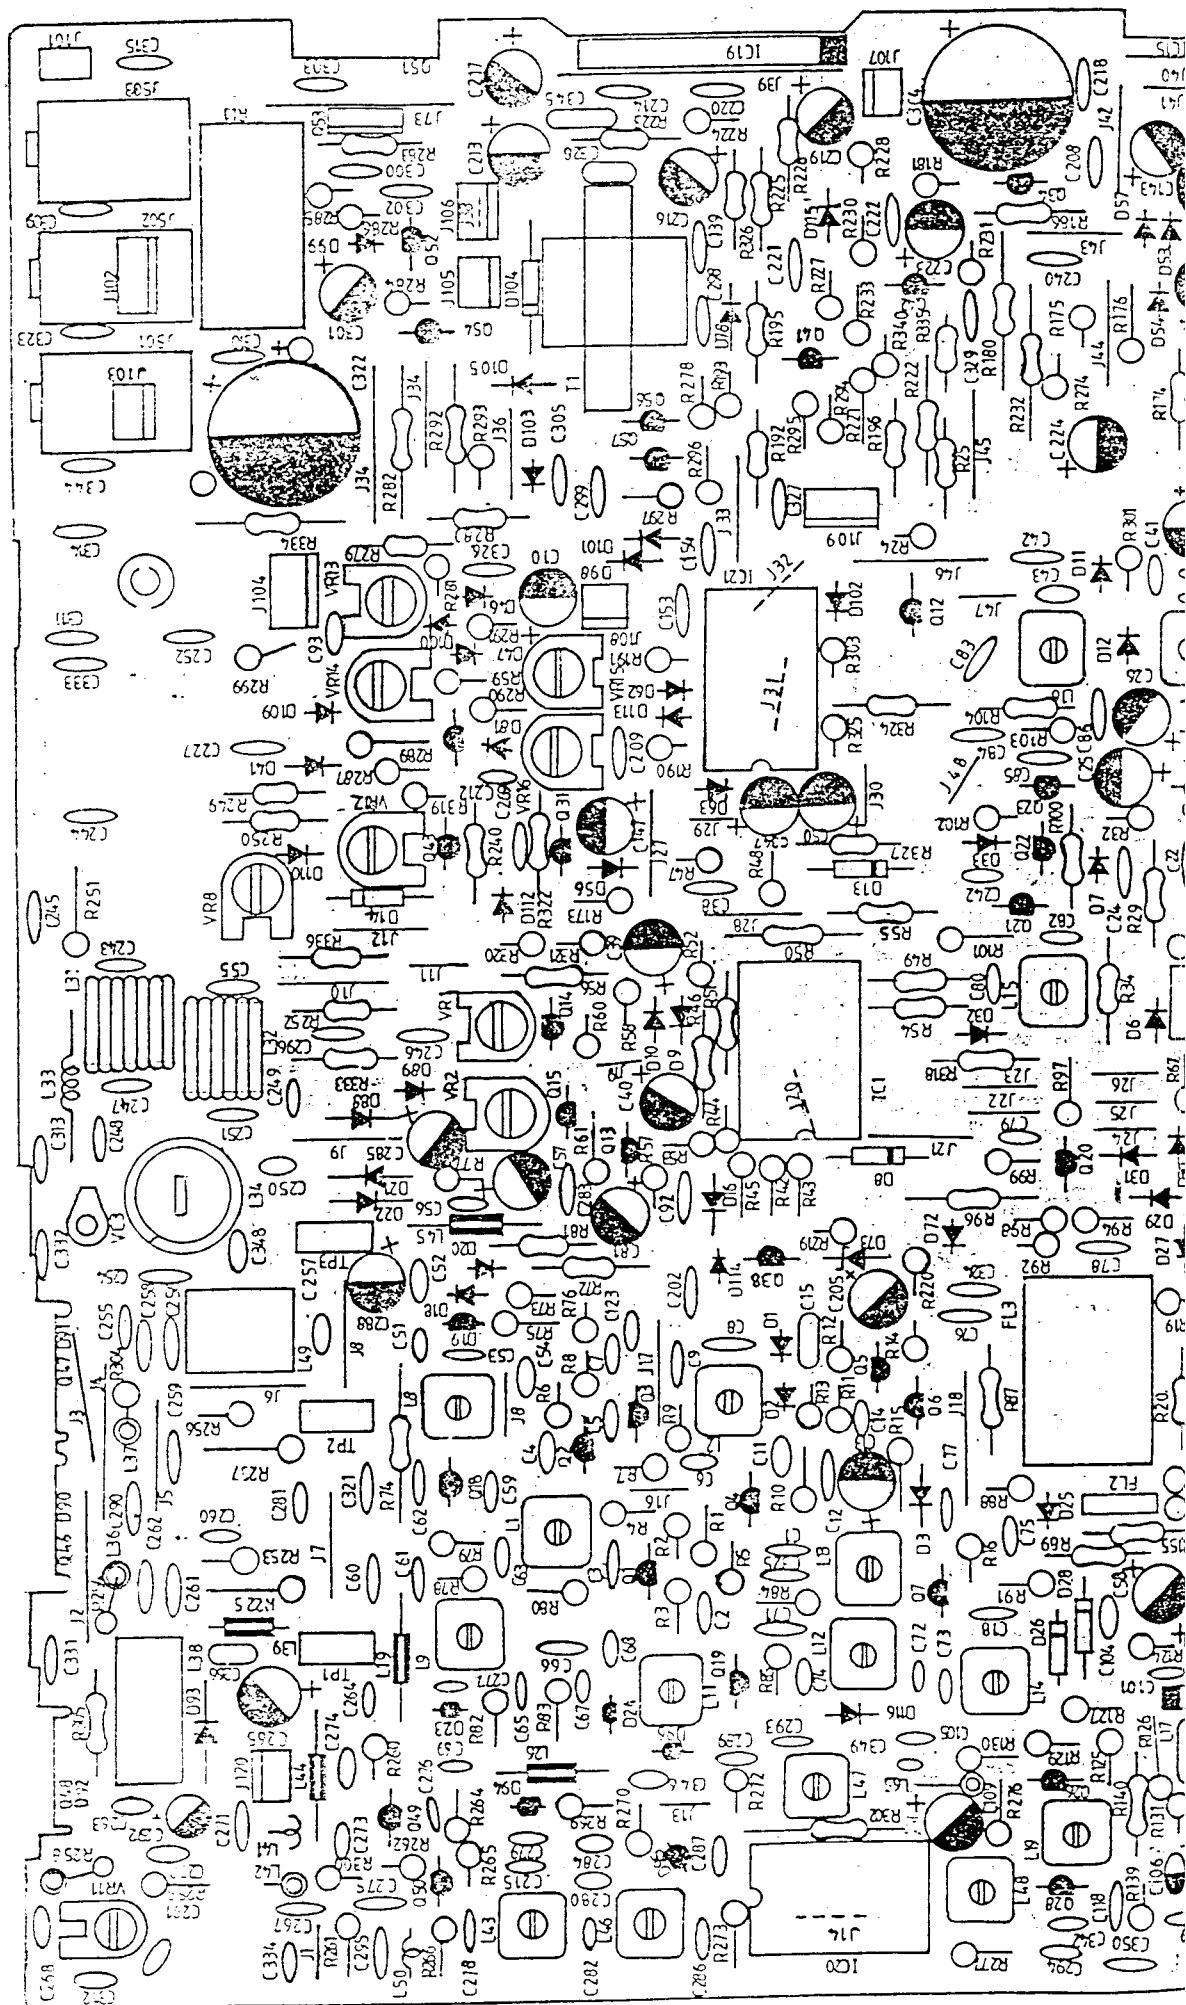


213

20

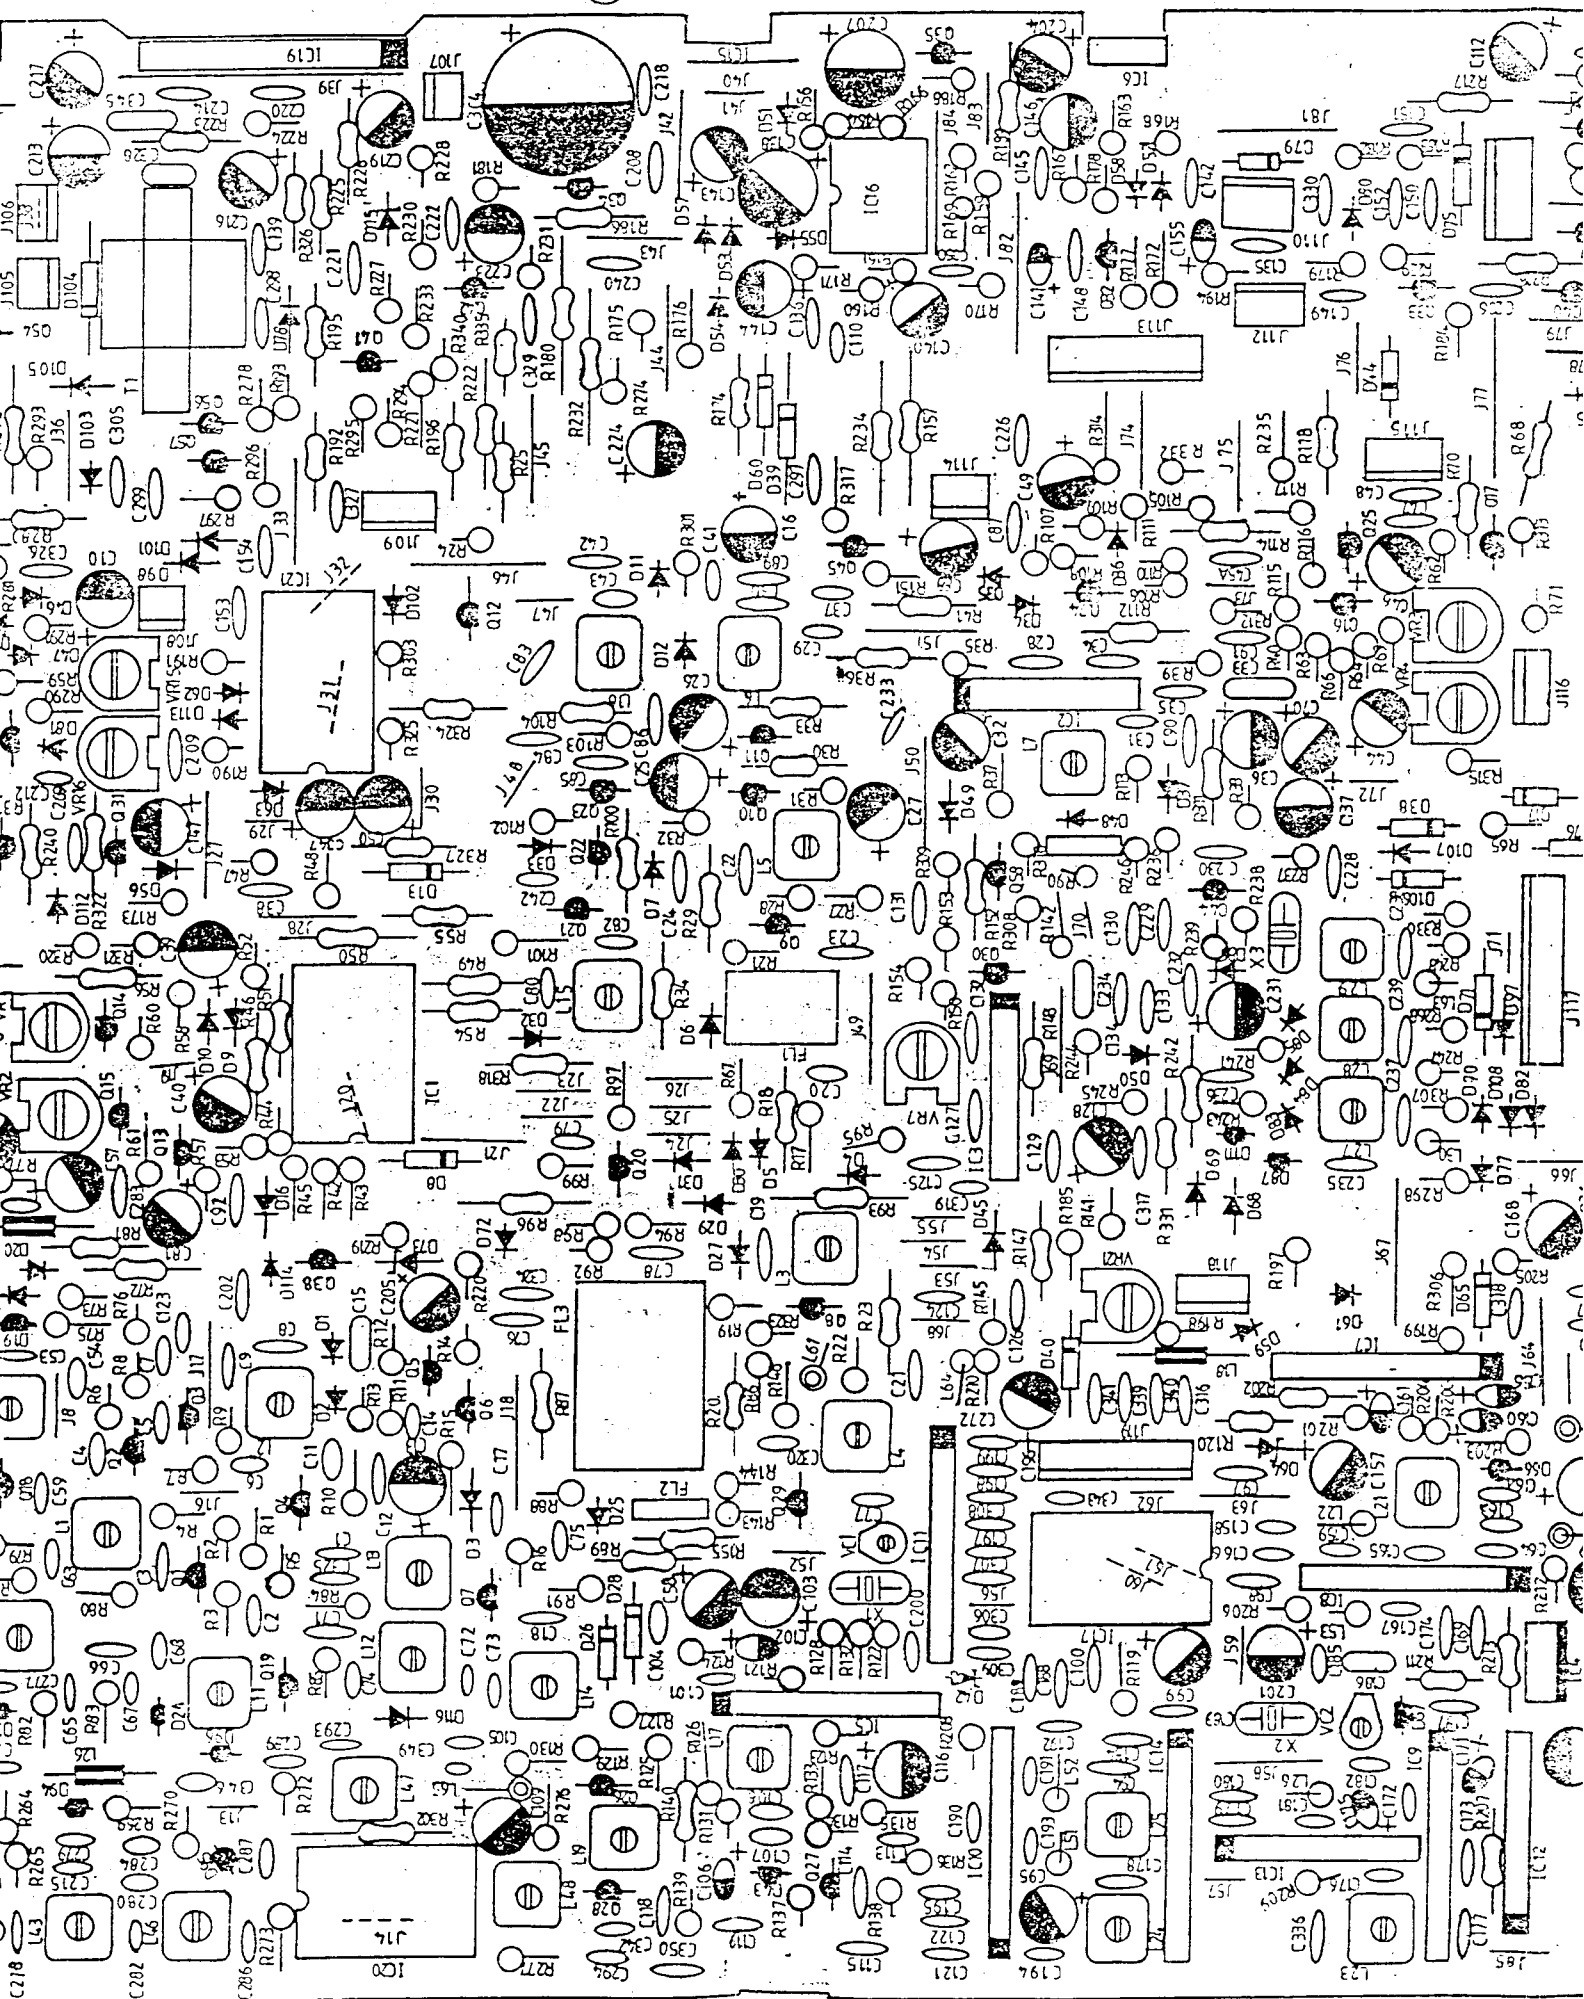

20

20

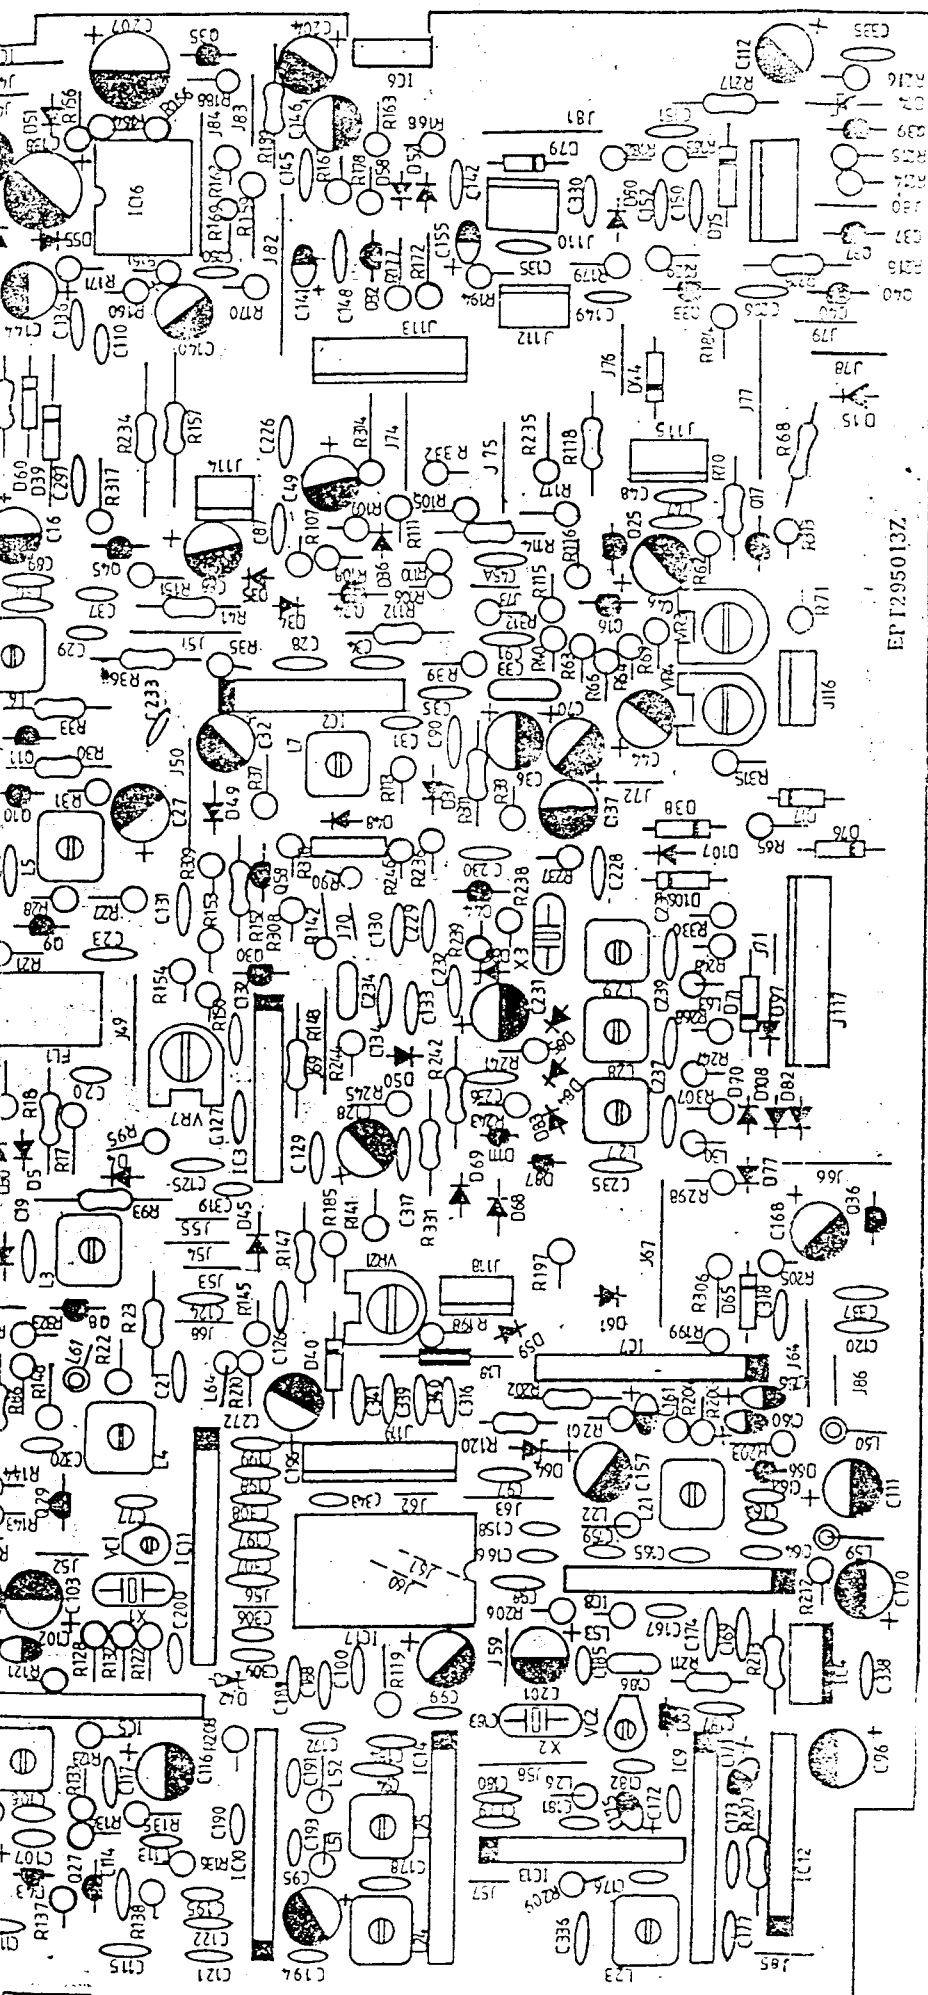

EPT295013Z

NOTES:

1. S = 2.11
2. MODEL = RANGER 2950
3. TITLE = MAIN P.C.B.
4. DWG NO = EPT295013Z

DATE = 78.7.5